 




www.vax.co.uk

Vax Careline:
0870 6061248

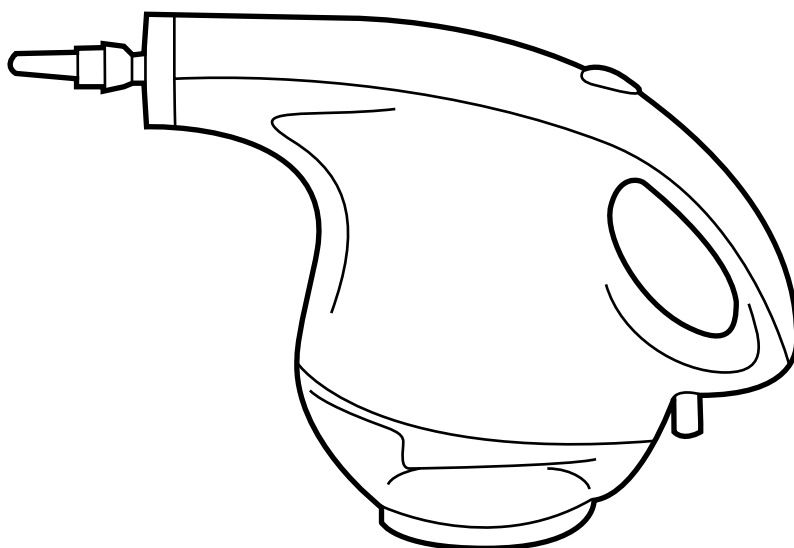

steam

handheld steam cleaner



 
Handheld Steamer

Vax Model Number: V-084

Please read carefully before using
the cleaner. Always fully extend
the mains cable before use.
Please retain these instructions
for future reference.

Instruction Manual

1. Diagram

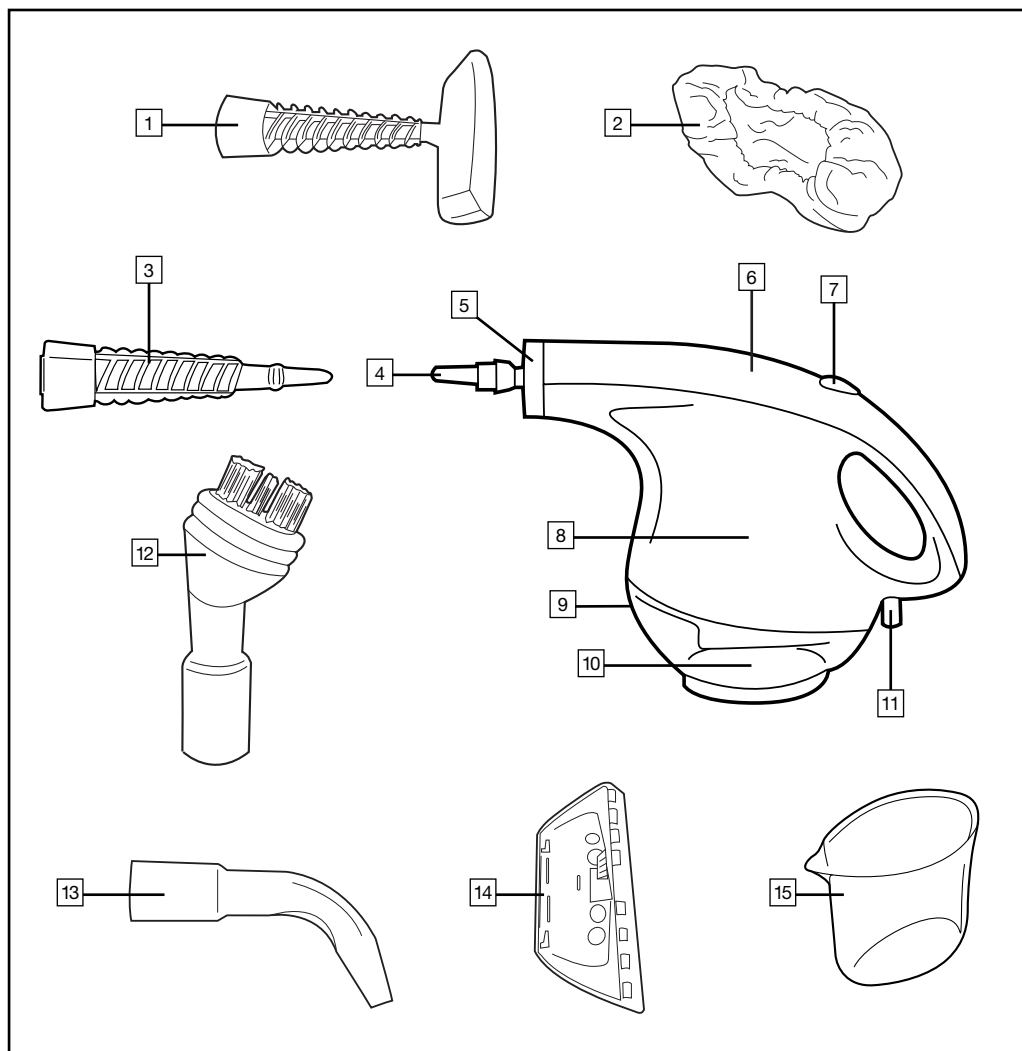

- | | | | |
|----|-----------------|-----|--------------------------------|
| 1. | Upholstery Tool | 9. | Water Reservoir Release Button |
| 2. | Cotton Cloth | 10. | Water Reservoir |
| 3. | Long Nozzle | 11. | Cord |
| 4. | Jet Nozzle | 12. | Nylon Brush |
| 5. | Jet Nozzle Base | 13. | Angled Nozzle |
| 6. | Handle Cover | 14. | Window Squeegee |
| 7. | Steam Button | 15. | Water Jug |
| 8. | Main Body | | |

2. Safety Information

FOR HOUSEHOLD USE ONLY

WARNING: Beware that the nozzle gets very hot during operation.

DANGER OF SCALDING: Avoid contact with the steam.

1. Do not leave the appliance unattended while it is switched on. Unplug the appliance from the mains supply socket before each cleaning / maintenance and before you fill / empty the water tank.
2. The appliance must be kept out of children's reach and can't be used by children.
3. In order to ensure safety, the appliance should only be assembled, connected and operated as set out in the instructions. Please also pay attention to the specifications on the model plate. Use only the accessories, which are recommended by manufacturer.
4. Examine the appliance before use in order to detect signs of damage. Do not operate if the appliance, its power cord or plug, show any signs of damage. In order to comply with safety regulations and to avoid hazards, qualified personnel must carry out repairs of electrical appliances. If repair is needed contact our customer service department.
5. The appliance cannot be operated if the power cord or plug is damaged. Do not use the power cord to carry the appliance. Beware that the power cord does not come into contact with hot surfaces.
6. Check the appliance and the mains wire before each use for perfect status.
7. After the use unplug the appliance from the mains supply socket.
8. During the operation keep the openings and the air outlet always free for good air ventilation.
9. Make sure that the appliance is not tilted over 45° during the operation. When the appliance is in operation, the nozzles should not be directed toward humans, animals or plants.
10. Never immerse the appliance into water or other liquid.
11. Only use water in this appliance. De-scaling products, perfume, detergent etc. should **not** be used with this appliance, in order to avoid damage.

NOTE: If the supply cord is damaged it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.

NOTE: Before each cleaning/maintenance and after each use unplug the appliance from the mains supply socket and let it cool down sufficiently.

NOTE: The liquid or steam must not be directed towards equipment containing electrical components, such as the interior of ovens.

The filling aperture must not be opened during use.

WARNING: The appliance heats up in the operation therefore do not touch the hot surface; use only the grasps or buttons. Always let the appliance cool down, before accessories are removed or attached from it.

ELECTRICAL WIRING: This appliance must be attached to a mains supply socket with grounding, therefore it is equipped with a mains cable with ground wire.

WARNING: Only a qualified person is allowed to check your mains supply socket. Never try to modify or change the mains plug of the appliance. Make sure that the supply voltage corresponds to the voltage marked on the rating label of the appliance.

3. How to attach the accessories

Warning: For the sake of safety, the plug must be unplugged from socket before attaching the accessories.

Warning: This appliance should not be used directly on soft plastics, non pre-treated wood or cold glass. To ensure steam can be used on the desired surface a small test run should be conducted to prevent damage.

How to Attach the Accessories

1. Long Nozzle

Insert the long nozzle onto the main body.

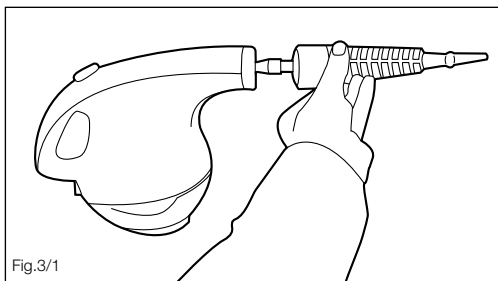 


Fig.3/1

When the long nozzle reaches the jet nozzle base twist the long nozzle to the right until it locks safely into place.

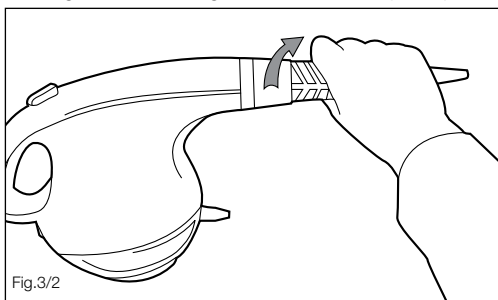 


Fig.3/2

2. Angled Nozzle

The angled nozzle can be used to clean corners. Insert the angled nozzle on to the jet nozzle directly (nb: it does not twist to lock into place as the long nozzle). The angled nozzle can be inserted to aim in 6 directions (See Examples).

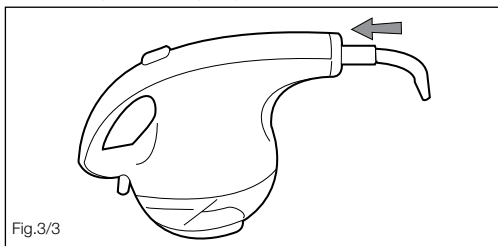 


Fig.3/3

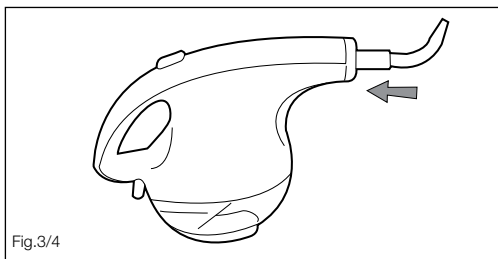 


Fig.3/4

The angled nozzle can also be used in conjunction with the long nozzle to add length.

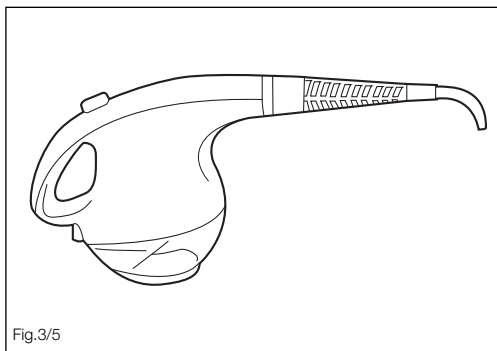 


Fig.3/5

3. Nylon Brush

The nylon brush attachment can be used to clean coarse surfaces. Push the nylon brush on to the jet nozzle or onto the long nozzle (as with the angled nozzle) as far as it will go to fix into place.

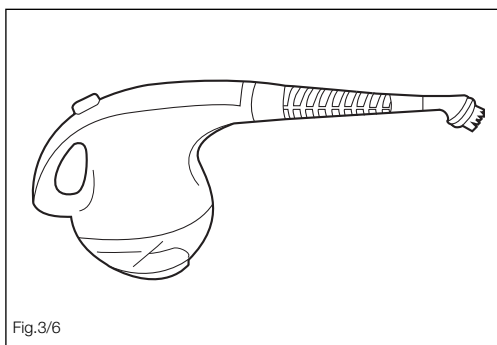 


Fig.3/6

4. Upholstery Tool

The upholstery tool can be in conjunction with the squeegee to clean windows and other smooth surfaces. It can also be used with the cotton cloth for cleaning upholstery.


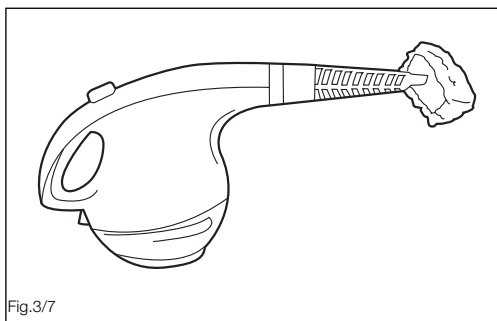 




Fig.3/7

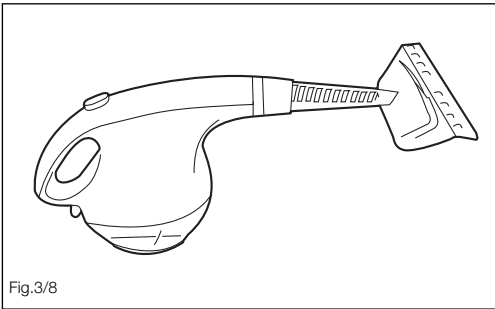 


The Upholstery Tool is fitted by pushing it onto the jet nozzle and twisting to the right until it locks in to place (as with the long nozzle). The cotton cloth is fitted by stretching it over the end of the upholstery tool. The window squeegee is fitted by clipping it onto the upholstery tool using the two bottom hooks and the large hook at the top to secure it.

4. Preparation For Use

  Press down the Water Reservoir Release Button and push the Water Reservoir backwards to release.

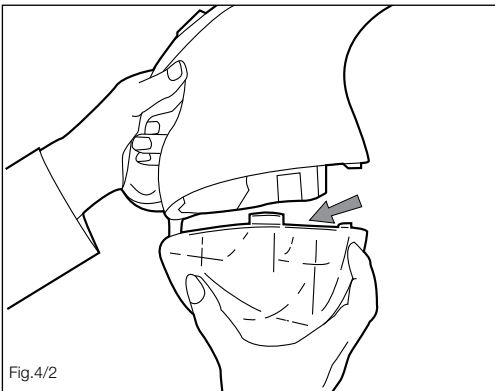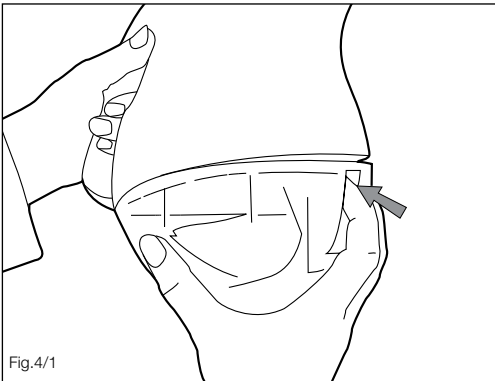

 
Remove the Water Reservoir Cap by twisting anti-clockwise. Fill with water.

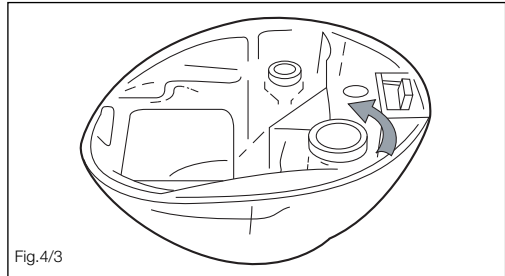

Reattach Water Reservoir to the Main Body.

Connect the power supply.

 Wait for between 30 & 60 seconds for the water to heat and then depress and hold the Steam Button to release the steam.

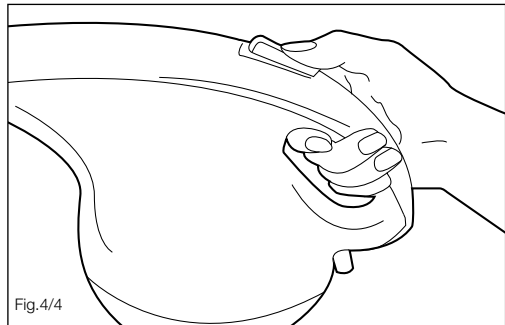

CAUTION: Steam will continue to be released for up to 30 seconds after the Steam Button has been released.

5. Trouble Shooting

Problem: Appliance does not start

Cause: Appliance not plugged in correctly

Solution: Attach the appliance to mains supply socket again

Cause: Mains supply socket damaged

Solution: Have the socket checked by a qualified electrician

Cause: Internal fuse burnt

Solution: Have the fuse change by a qualified electrician

Cause: No water in reservoir

Solution: Fill water reservoir

Problem: No steam

Cause: No water in reservoir

Solution: Fill water reservoir

Problem: Water runs out from nozzle

Cause: Too much water in the reservoir

Solution: Reduce water in the reservoir

Cause: Appliance tilted too far

Solution: Hold appliance in an upright position

Cause: Appliance not hot enough

Solution: Let the appliance heat up for longer before depressing Steam Button

Problem: Water 'cooks' during filling

Cause: Water reservoir still hot

Solution: Allow to cool before filling

Problem: Accessory comes loose

Cause: Accessory not correctly attached

Solution: Refer to user guide for correct fitting information

Problem: All solutions exhausted but steamer is still not working

Cause: Appliance is damaged

Solution: Contact the customer services department

6. UK Service & Help

Vax Care 0870 6061248

Monday-Friday. 9.00am to 5.00pm.

An answerphone will be available out of these hours. Any queries or concerns about using your Vax, call the Vax Careline. Calls are charged at the UK national rate.

Please make a note of the serial number and model number of your carpet cleaner before calling. There are over 400 approved Vax Service Agents in the UK. For the nearest Vax Service Agent, please call the Vax Careline or visit www.vax.co.uk

7. Technical Specification

Voltage: 240v 50Hz

Water Reservoir Volume: 0.5 litres

Wattage: 1210w

Cord Length: 5.1m

Weight: 1.9kg



This page has been left intentionally blank.

EEC STATEMENT OF COMPLIANCE

Manufacturer/EEC importer: Vax Limited, hereby on our own responsibility declare that the product V-084 Handheld Steam Cleaner is manufactured in compliance with the following:

Safety: 73/23/EEC Low Voltage Directive, as modified by 93/68/EEC

EMC: 89/336/EEC Electromagnetic Compatibility Directive, as modified by 93/68/EEC



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

Vax Ltd., Kingswood Road, Hampton Lovett, Droitwich, Worcestershire, WR9 0QH, UK

email: info@vax.co.uk - website: www.vax.co.uk

Version 1