




Vax careline  
0870 6061248

# Bagless upright

**ultima**  
*cyclonic*

Vax model number:  
VZL-101

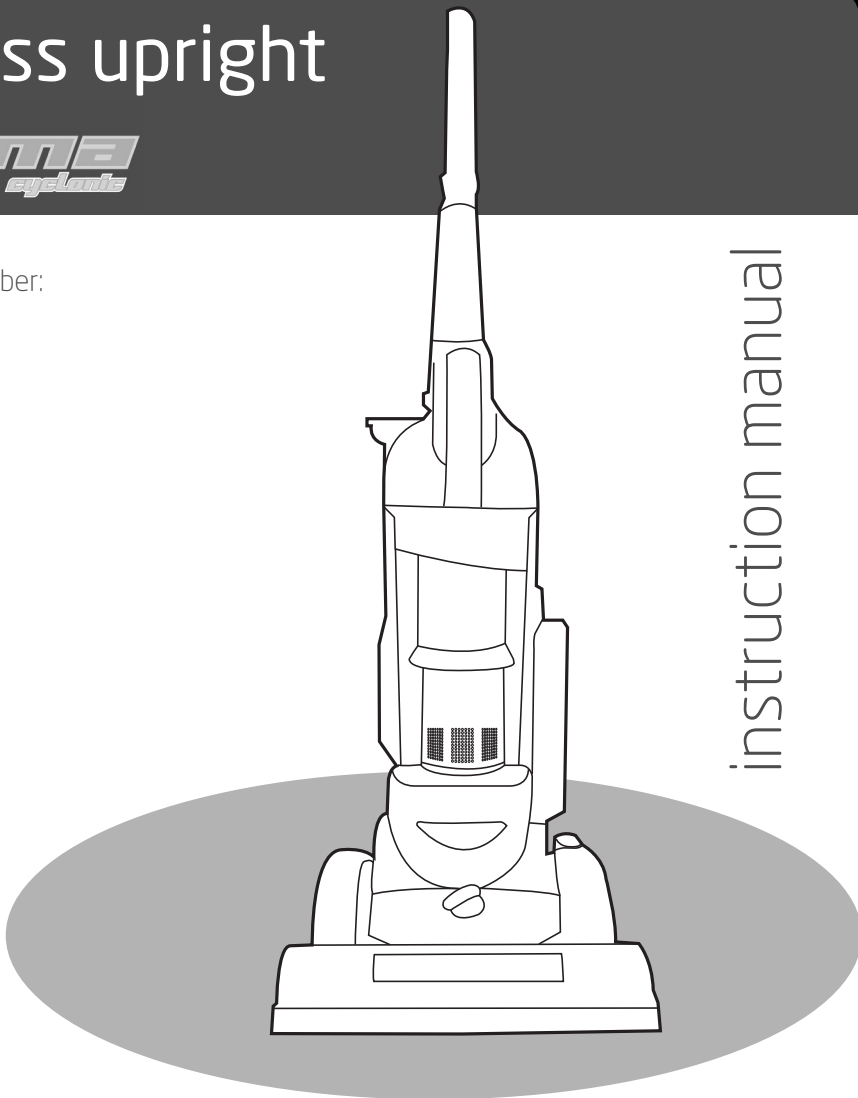

instruction manual

[www.vax.co.uk](http://www.vax.co.uk)

Please read carefully before using this cleaner.  
Always fully extend the mains cable before use.  
Retain for future reference.

# 1. Diagram

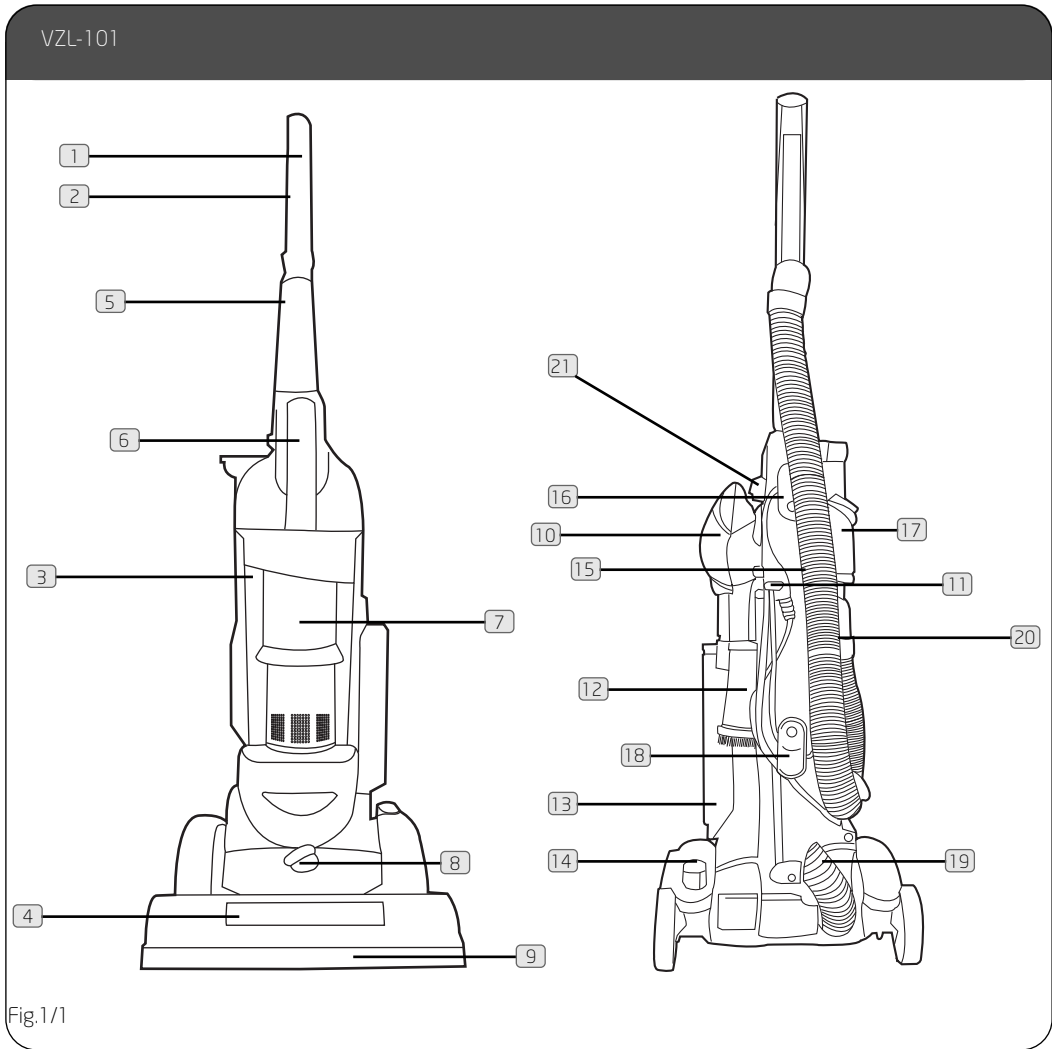


Fig.1/1

- |                          |                         |                        |
|--------------------------|-------------------------|------------------------|
| 1 Handle Grip            | 9 Bumper strip          | 17 Upholstery tool     |
| 2 Handle                 | 10 Turbo Tool           | 18 Lower Cord Wrap     |
| 3 Dirt Container         | 11 Cord                 | 19 Lower Hose          |
| 4 Brush bar window       | 12 Dusting Brush        | 20 Hose connector      |
| 5 Extension wand         | 13 Crevice Tool         | 21 Power on/off switch |
| 6 Carry Handle           | 14 Handle release pedal |                        |
| 7 Central Dust Chamber   | 15 Hose                 |                        |
| 8 Carpet Height Adjuster | 16 Upper Cord Wrap      |                        |

## 2 parts overview

## 2. Safety Information

### For Household Use Only

When using the vacuum cleaner, basic safety precautions should always be observed, including the following:

1. Only use the vacuum cleaner indoors on dry surfaces.
2. Turn off the vacuum cleaner controls before connecting or disconnecting from the mains supply.
3. Always unplug the vacuum cleaner before connecting or disconnecting the vacuum hose and accessories.
4. Close attention is necessary when used by or near children. Do not allow children to use as a toy.
5. Use only as described in this manual. Use only the manufacturer's recommended attachments.
6. Do not use the vacuum cleaner if it has been dropped, damaged, left outdoors or dropped into water. Do not use the vacuum cleaner with a damaged cord or plug. If the supply cord or plug is damaged, return the vacuum cleaner to a Vax Authorised Service Agent or suitably qualified person for examination, repair or adjustment.
7. Do not pull or carry by the cord. Do not use the cord as a handle, close a door on the cord or pull the cord around sharp edges or corners. Do not run the vacuum cleaner over the cord. Keep the cord away from heated surfaces.
8. Do not handle the plug or vacuum cleaner with wet hands. Do not use outdoors or on wet surfaces.
9. Do not put any objects into openings. Do not use with any openings blocked and do not restrict air flow. Keep all openings free of dust, lint, hair or anything that may reduce airflow.
10. Keep hair, loose clothing, fingers and all parts of the body away from openings and moving parts.
11. Do not pick up hot coals, cigarette butts, matches or any hot, smoking or burning objects.
12. Do not pick up flammable or combustible materials (lighter fluid, petrol, kerosene, etc) or use in the presence of explosive liquids or vapours.
13. Do not vacuum up harmful or toxic material (chlorine bleach, ammonia, drain cleaner, etc).
14. Do not vacuum up hard or sharp objects such as glass, nails, screws, coins, etc.

15. Do not use without the filters in place.
16. Take extra care when vacuuming on stairs.
17. Keep vacuuming area well lit.
18. Store the vacuum cleaner indoors in a cool, dry area.
19. Turn off the on/off switch before unplugging the vacuum cleaner.
20. Use only CE-approved 13 amp extension cords. Non-approved extension cords may overheat. Care should be taken to arrange the cord so that the cord cannot be pulled or tripped over.

**⚠ WARNING:** Always switch off and unplug the vacuum cleaner from the electrical outlet before assembling, opening or emptying the dirt container, or before connecting/disconnecting the attachments.

**⚠ CAUTION:** The vacuum cleaner is a very powerful unit. Before plugging the cord into the electrical outlet, make sure the switch is in the 'off' position. Hold the vacuum cleaner firmly when starting and in use.

**⚠ IMPORTANT:** If the inlet, hose or extension tube is blocked, switch off the vacuum cleaner and remove the blockage(s) before re-starting the vacuum cleaner.

**⚠ IMPORTANT:** Cleaning filters regularly improves vacuum performance. Make sure all filters are replaced back into the vacuum cleaner before using. This vacuum cleaner is intended for household use only and not for commercial or industrial use.

PLEASE KEEP THESE INSTRUCTIONS FOR FURTHER USE.

### Motor Thermostat


**⚠ IMPORTANT:** The motor is equipped with a thermal cut-out. If for any reason, the vacuum cleaner should over-heat, the thermostat will automatically turn the unit off. Should this occur, unplug the vacuum cleaner from the electrical outlet and turn off the switch. Remove the dirt container and empty. Clean the filters. Allow the cleaner to cool for approximately one (1) hour. To re-start, plug into an electrical outlet and switch back on.

www.vax.co.uk

## 3. How to assemble


### Handle Assembly

Slide wand into slot until you hear a click. Insert screws into holes indicated (Fig.3/1).

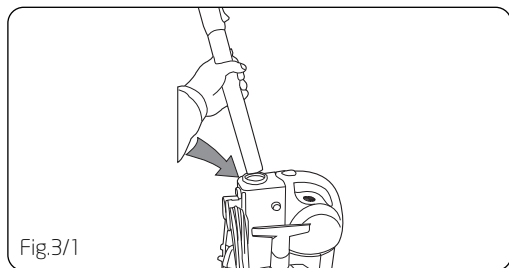

### Tool Storage


Attach tools: (a) Slide the upholstery tool onto the caddy above the hose connector and slide the TurboTool onto the caddy on the other side. (b) Clip the dusting brush and crevice tool into the holsters below the TurboTool. (Fig.3/2). (c) Clip Turbo Tool onto the side of the cleaner (Fig.3/2).

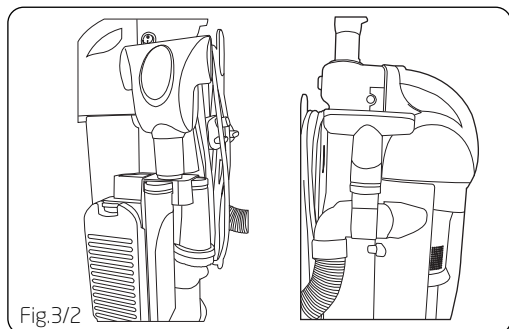

## 4. How to operate


### Cord release

Turn Upper Cord Release for easy cord removal (Fig.4/1).

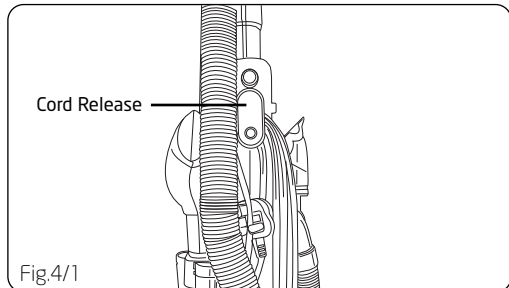

### Carpet height adjuster

Turn the carpet height adjuster knob to match the surface being cleaned (Fig.4/2).

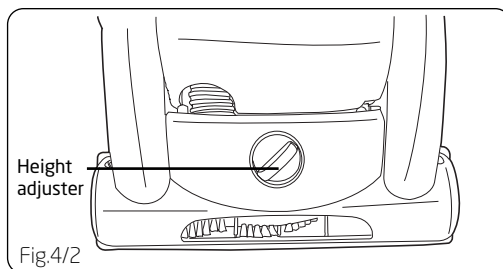


**! IMPORTANT:** For easiest adjustment, place cleaner in full upright position.

### On/Off Switch

Plug cord into electrical outlet. Turn cleaner on by pressing the on/off button located above the TurboTool caddy.

### Handle Release Pedal

To release handle, push the handle release pedal located on the lower left side of the cleaner (Fig.4/3).

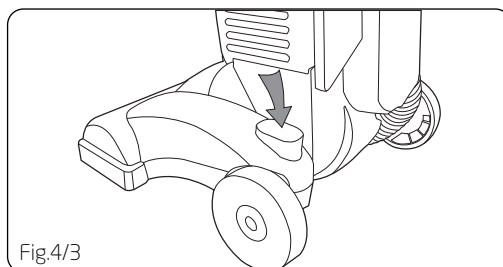

**! CAUTION:** Brushbar continues to rotate while hose is removed or in use and at all times while cleaner is on. Keep hair, loose clothing, fingers, and all parts of body away from brush area while cleaner is on. Cleaner must be in the upright position to lift the rotating brush off the carpet when cleaning above the floor.

### Floor/Carpet Cleaning

Move the handle and adjust it to the desired position for (a) storing the upright, (b) operating the cleaner, and (c) de-press the handle release pedal again to clean under furniture. NOTE: Brushbar could cause rug fringe area to become tangled within cleaner. Use caution when vacuuming throw rugs with fringe.

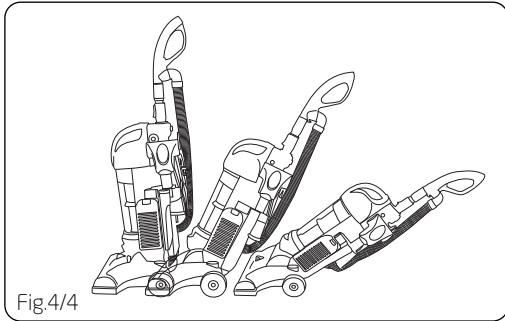


Fig.4/4

### Using the Accessories

Cleaner must be in its upright position to raise brushbar. Turn carpet height adjuster to long carpet pile setting (Fig.4/5).

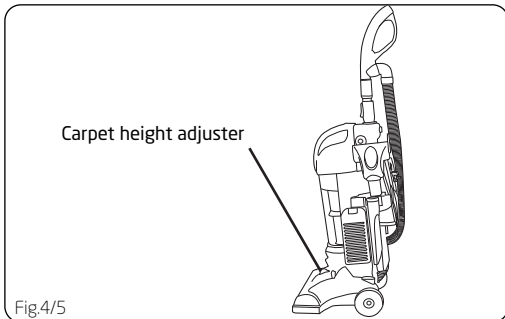


Fig.4/5

Press the wand release button and pull the handle and wand out of the slot. Fig.4/6).

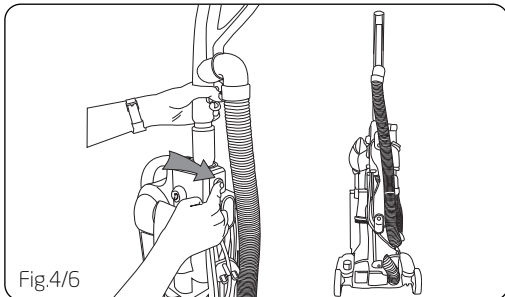


Fig.4/6

Any of the accessories can be directly attached to the end of the extension wand.

The extension wand length can be adjusted by pressing the release button forward and sliding the wand end up or down. Take pressure off release button when desirable wand length has been found. (Fig 4/7).

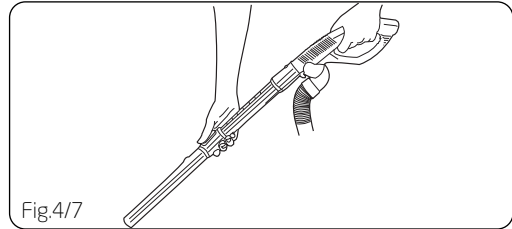


Fig.4/7

Simply push the attachment firmly onto the end of the extension wand. To remove tool, twist and pull apart gently (Fig.4/8).

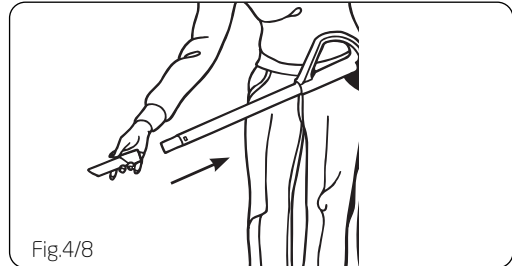


Fig.4/8

The TurboTool is ideal for removing pet hair from stairs and upholstery. The TurboTool is most effective when using backward strokes over the area that is being cleaned.

### Carry Handle

Use the carry handle located on the top of the dirt container lid to move the cleaner from room to room (Fig.4/9).


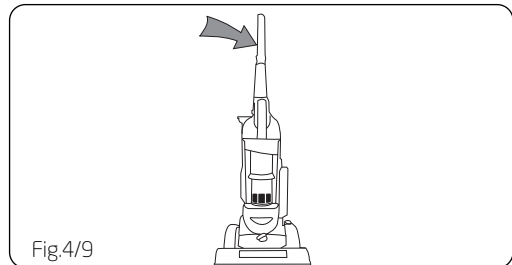


Fig.4/9

## 5. Dirt container & filter: removal & replacement


**⚠ WARNING: to reduce risk of injury from moving parts - unplug before servicing.**

Press both dirt container release buttons and remove dirt container from cleaner (Fig.5/1).

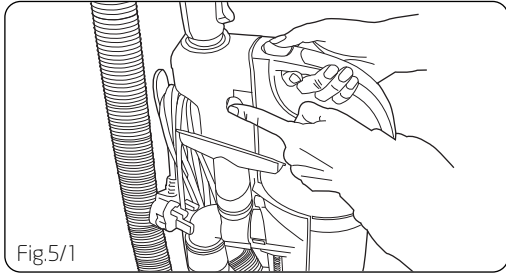


Hold the dirt container inside rubbish bin and press the two bin empty release buttons to release the dirt into the bin. Press the U-shaped button first to release the fine dust from the central dirt chamber then the smaller button to release the rest of the dust. (fig 5/2).

### Remove central dust chamber

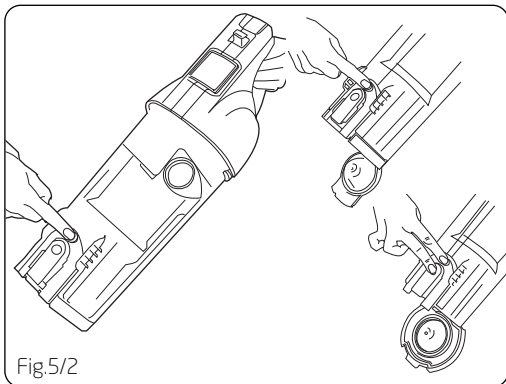


### Cleaning the pre-motor filter

Remove the dirt container lid, pull out the filter assembly and separate the filter from it. (Fig.5/3).

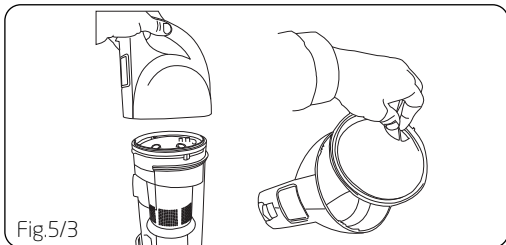


Separate the filter assembly by removing the foam filter from its plastic housing. Tap the foam filter on the inside of a rubbish bin to remove excess dust and dirt from filter.

Tap the filter inside a bin to shake off excess dust. The filter can be washed under cold running water to clean it more thoroughly. (fig 5/4)

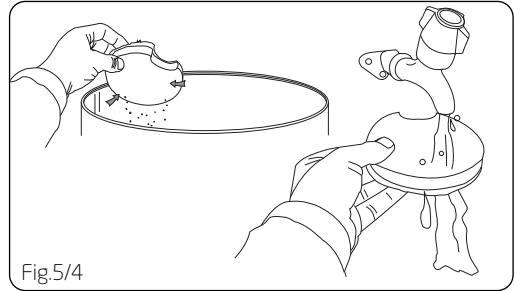


Return foam filter to its housing and replace into dirt container lid. (fig 5/5)".

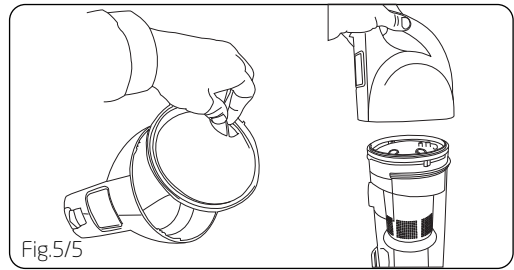

**NOTE:** The filter housing also needs to be washed regularly with cold water and dried thoroughly before replacing and restarting the vacuum cleaner.

### Cleaning the exhaust filter

Press tab on top of exhaust cover and pull cover back to remove.

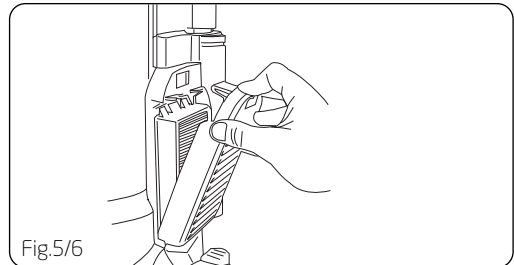

Press the two tabs at top of filter and lift off side of cleaner (Fig.5/7).

## 6 dirt container and filter

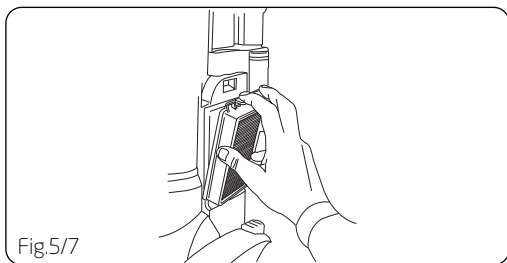


Fig.5/7

Tap the exhaust filter on the inside of a rubbish bin to remove excess dust and dirt from filter (Fig.5/7).

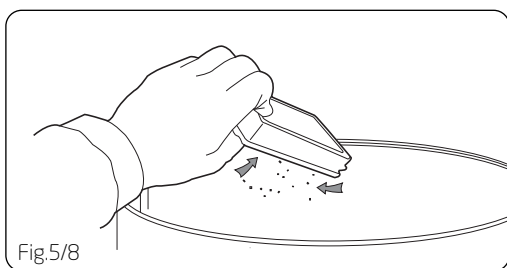


Fig.5/8

Wash the exhaust filter under cold running water every 9 -12 months. Leave to dry for 24 hours before replacing in machine.

Return exhaust filter to side of cleaner and snap into place (Fig.5/9).

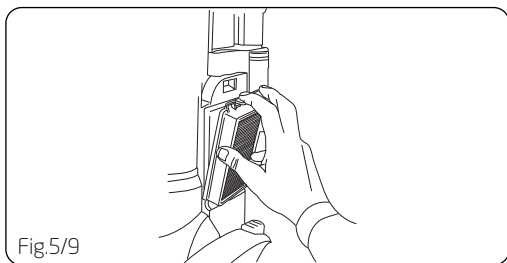


Fig.5/9

Replace exhaust filter cover and snap into place to secure (Fig.5/10).

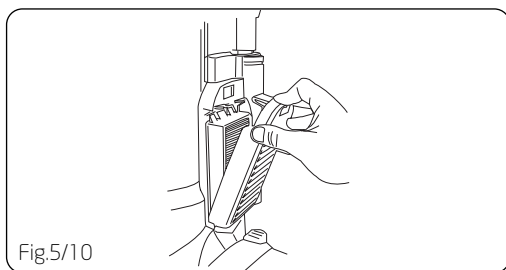


Fig.5/10

### Replace dirt container

Return dirt container to cleaner. Align slot on bottom of dirt container with tab on cleaner. Push to snap into place (Fig.5/11).

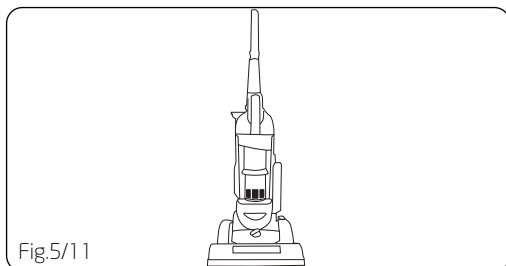


Fig.5/11

### Regular Maintenance


Each time the dirt container is emptied, the pre-motor filter should be checked and when necessary, cleaned (Filter may discolour after use, this will not affect the filters performance). Do not brush the filter. The cleaning instructions may vary depending on the dirt conditions. In some cases, more or less cleaning of the filter may be required.

## 6. Belt or brushbar: removal and replacement

**TOOL REQUIRED:** Phillips screwdriver

**⚠ WARNING:** to reduce the risk of injury from moving parts - unplug cleaner before changing belt or brush.


To remove belt

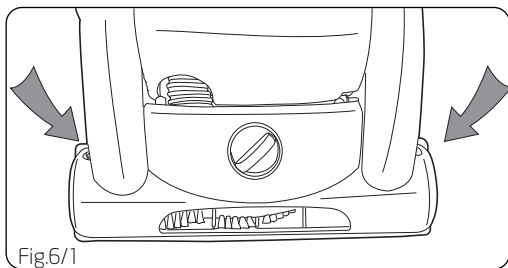


Stand cleaner up (Fig.6/1).

Base should lay flat and face up. To remove nozzle guard, use Phillips screwdriver to remove the TWO (2 ) screws. Arrows show location of screws (Fig.6/1).

Remove sole plate by lifting off (Fig.6/2).

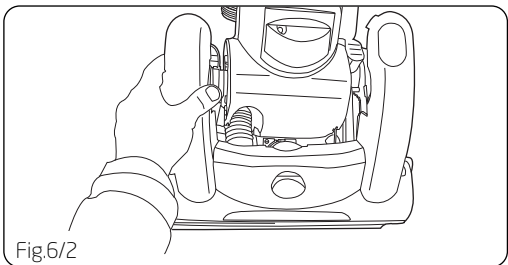


Lift and remove brushbar. Dispose of old belt (Fig.6/3).

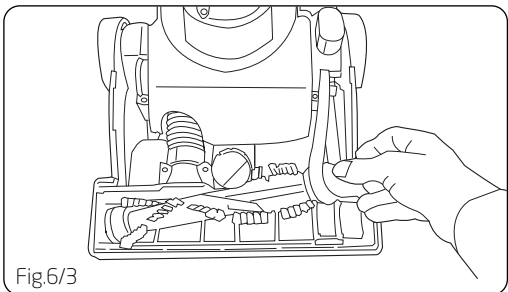


To replace belt or brushbar


Slide belt onto motor shaft (Fig.6/4).

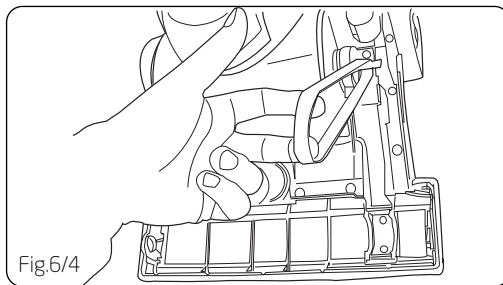


Place new belt in area of brushbar without bristles (Fig.6/5).

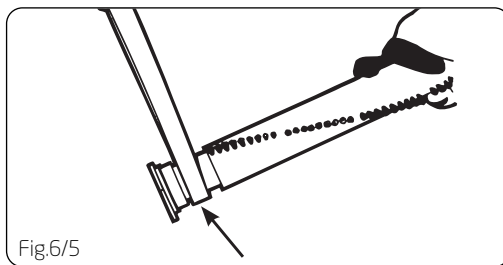

With new belt in place, pull and slide brushbar into nozzle making sure that the brushbar end caps are in the correct orientation (Fig. 6/6 inset). Rotate brushbar manually to make sure belt is properly aligned.

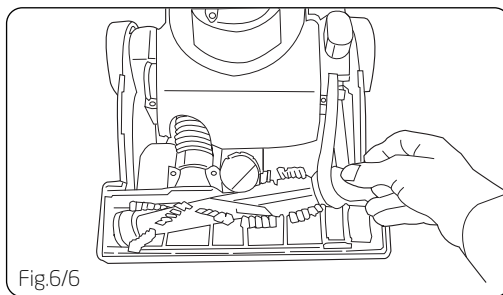

Replace base hood onto base of cleaner (Fig. 6/7).

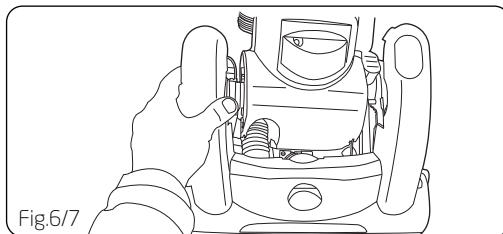

Replace all Two (2) screws to secure nozzle guard (Fig.6/8).

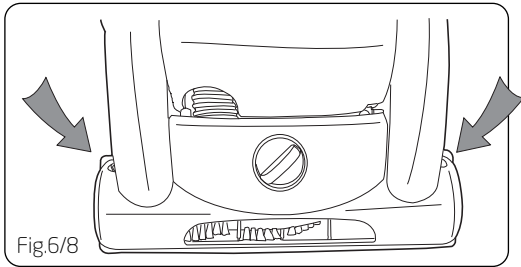


Fig.6/8

2. Remove dirt container (Pg. 6) and check dirt container inlet located on cleaner.

#### Debris removal/Turbo Tool

To check for blockages in the TurboTool, simply lift the inspection flap for access to the turbine. (see fig 8/3)

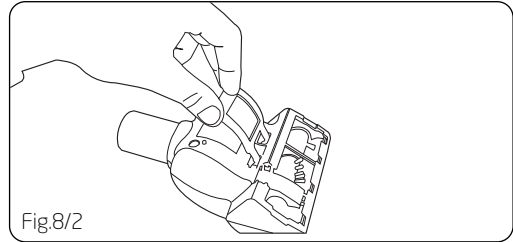


Fig.8/2

## 7. Lightbulb: removal and replacement

Please contact Vax on 0870 606 1248 for further advice.

**IMPORTANT:** Do not attempt to remove or replace the lightbulb yourself.

## 8. General maintenance

**⚠ WARNING:** To reduce risk of injury from moving parts - unplug before servicing.

#### Debris removal/nozzle guard

- Check to see if dirt container is full; empty if needed.
  - Plug cleaner in and check to see if there is any suction at end of hose.
1. Unwrap hose from caddy. Press and remove tabs at either end to remove. Clean out hose with broom handle. Remove the two (2) screws on the base of the cleaner and lift up base hood to check nozzle for blockages (Fig.8/1).

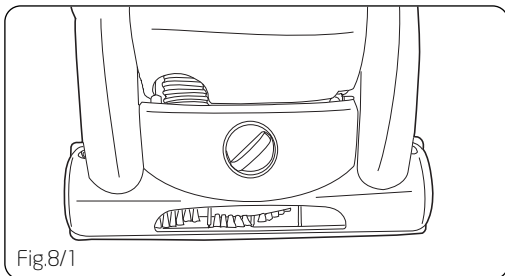



Fig.8/1

## 9. Troubleshooting

 **WARNING:** To reduce risk of personal injury, unplug vacuum cleaner before servicing.

**PROBLEM:** Cleaner won't run

**Cause:** Not properly plugged into wall outlet.

**Solution:** Plug in firmly.

**Cause:** No electricity in wall outlet.

**Solution:** Check fuse or breaker.

**Cause:** On/off switch not turned on.

**Solution:** Push on/off switch to on.

**Cause:** Motor thermostat tripped.

**Solution:** Switch off and unplug the vacuum cleaner. Leave for one (1) hour. See page 3.

**Cause:** Blown fuse/tripped breaker.

**Solution:** Reset circuit breaker or replace fuse.

**PROBLEM:** Cleaner won't pick up

**Cause:** Full or clogged dirt container.

**Solution:** Clean dirt container.

**Cause:** Clogged nozzle.

**Solution:** Remove obstruction.

**Cause:** Clogged dirt inlet.

**Solution:** Remove suction channel cover and remove obstruction.

**Cause:** Clogged hose.

**Solution:** Remove obstruction.

**Cause:** Hose not inserted fully.

**Solution:** Push hose in securely.

**Cause:** Dirty filters or filter container.

**Solution:** Clean/change filters or filter container.

**PROBLEM:** Accessories won't pick up

**Cause:** Accessories not attached correctly.

**Solution:** Refer to page 5 for fitting information.

**PROBLEM:** Brushbar does not turn

**Cause:** Brushbar blocked.

**Solution:** Remove blockages.

**PROBLEM:** Air flow restricted with attachment use

**Cause:** New carpet debris clogging air path.

**Solution:** Remove obstruction.

## 10. UK Service & Help

**Vax Care 0870 6061248**

Monday-Friday 8.00am to 6.00pm.

Saturday 9.00am to 5.00pm.

Sunday 10.00am to 4.00pm.

An answerphone is available outside of these hours. Any queries or concerns about using the Vax, call the Vax Careline. Calls are charged at the UK national rate.

Please make a note of the serial number and model number of the carpet cleaner before calling. There are over 400 approved Vax Service Agents in the UK. For the nearest Service Agent, please call the Vax Careline.

[www.vax.co.uk](http://www.vax.co.uk)

## 11. Technical Specification

Voltage: 220 – 240V ~50Hz  
Wattage: 1300W  
Capacity: 1.4 litres  
Filters: Foam pre-motor  
Pleated HEPA exhaust filter  
Cord Length: 6m  
Weight: 8.4kg

Subject to technical change without notice.





### EEC STATEMENT OF COMPLIANCE

Manufacturer/EEC importer: Vax Limited, hereby on our own responsibility, declare that the VZL-101 Ultima Cyclonic Upright is manufactured in compliance with the following Directives:

**Safety:** 2006/95/EC Low Voltage Directive

**EMC:** 2004/108/EC Electromagnetic Compatibility Directive



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

Vax Ltd., Kingswood Road, Hampton Lovett, Droitwich, Worcestershire, WR9 0QH, UK  
email: [info@vax.co.uk](mailto:info@vax.co.uk) - website: [www.vax.co.uk](http://www.vax.co.uk)