




Vax careline
0870 6061248

Handheld Steamer steam

handheld steam cleaner



Vax model number:
V-084N

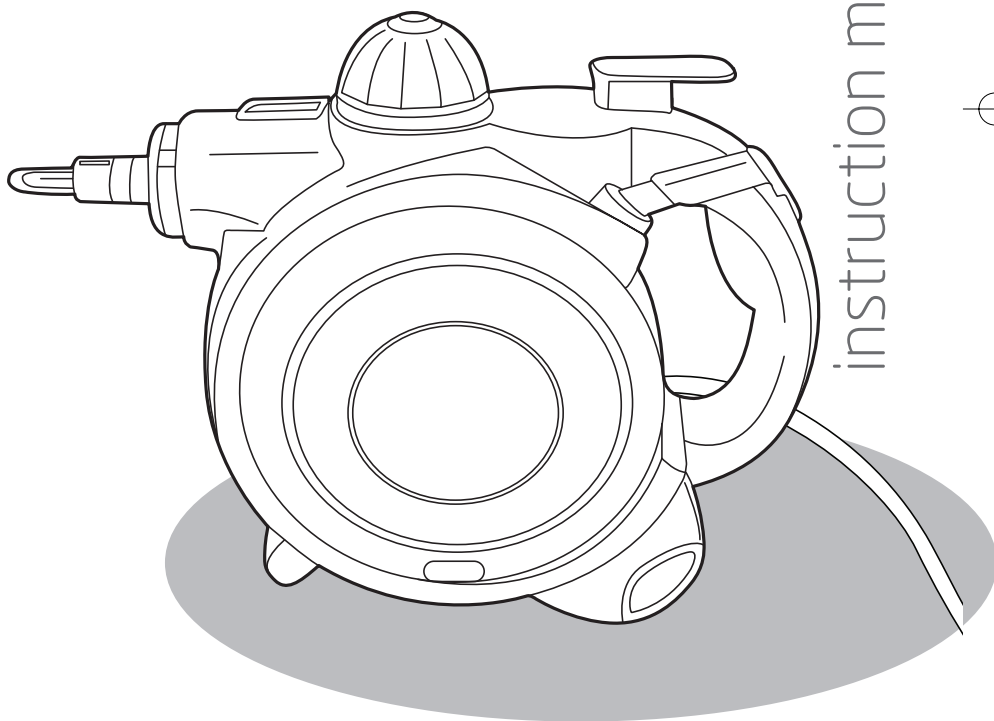

instruction manual

www.vax.co.uk

Please read carefully before using this cleaner.
Always fully extend the mains cable before use.
Retain for future reference.

1. Diagram

V-048N

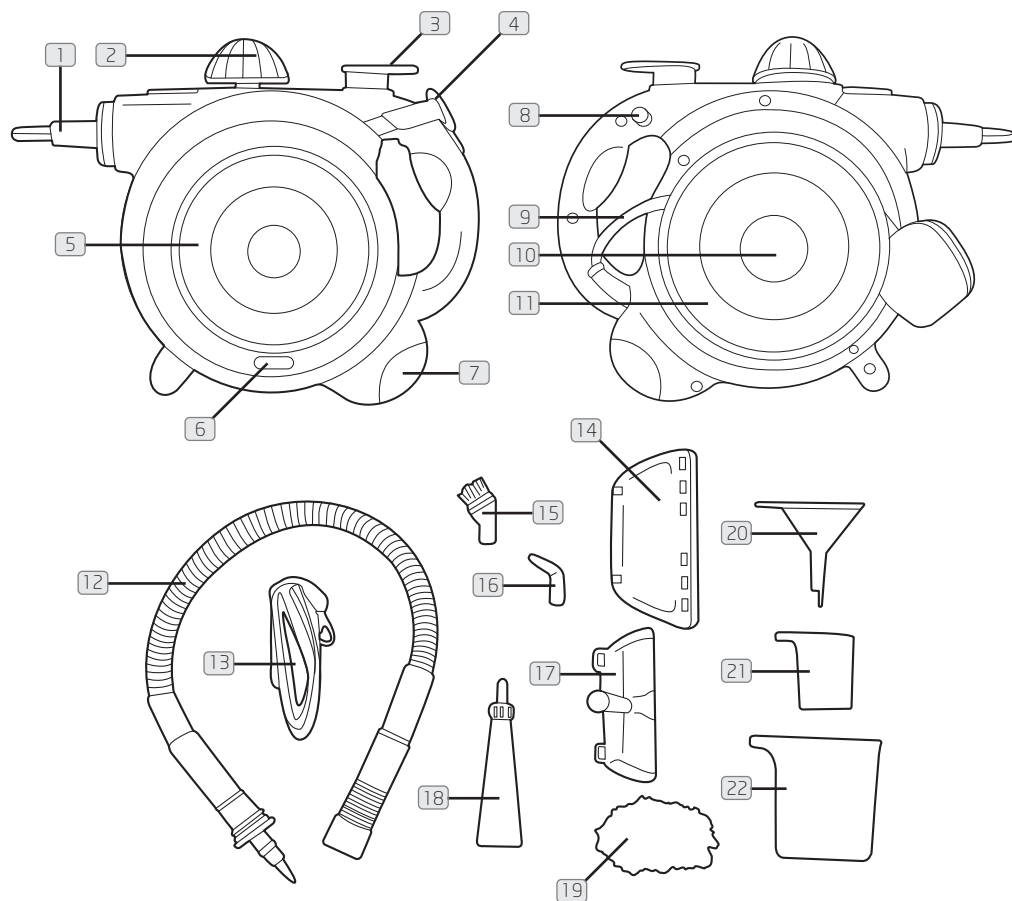



Fig.1/1

- | | |
|---------------------------------------|-------------------------------|
| 1 Attachment connector / steam outlet | 12 Extension hose |
| 2 Steam reservoir cap | 13 Carry strap |
| 3 Steam trigger | 14 Window tool |
| 4 Spray trigger | 15 Stiff bristle brush |
| 5 Steam reservoir | 16 Detail tool |
| 6 Power / Ready indicator | 17 Mattress / upholstery tool |
| 7 Spray reservoir | 18 Steam nozzle |
| 8 Steam trigger lock | 19 Cotton cloth |
| 9 Power cord | 20 Funnel |
| 10 Cord reel release button | 21 Spray reservoir jug |
| 11 Cord reel | 22 Steam reservoir jug |

2 parts overview

2. Safety Information

FOR HOUSEHOLD USE ONLY.

 **WARNING:** Beware that the nozzle gets very hot during operation.

DANGER OF SCALDING: Avoid contact with the steam.


1. Do not leave the appliance unattended while it is switched on. Unplug the appliance from the mains supply socket before each cleaning / maintenance and before you fill / empty the water tank.
2. The appliance must be kept out of children's reach and can't be used by children.
3. In order to ensure safety, the appliance should only be assembled, connected and operated as set out in the instructions. Please also pay attention to the specifications on the model plate. Use only the accessories, which are recommended by manufacturer.
4. Examine the appliance before use in order to detect signs of damage. Do not operate if the appliance, its power cord or plug, show any signs of damage. In order to comply with safety regulations and to avoid hazards, qualified personnel must carry out repairs of electrical appliances. If repair is needed contact our customer service department.
5. The appliance cannot be operated if the power cord or plug is damaged. Do not use the power cord to carry the appliance. Beware that the power cord does not come into contact with hot surfaces.
6. Check the appliance and the mains wire before each use for perfect status.
7. After the use unplug the appliance from the mains supply socket.
8. During the operation keep the openings and the air outlet always free for good air ventilation.
9. Make sure that the appliance is not tilted over 45° during the operation. When the appliance is in operation, the nozzles should not be directed toward humans, animals or plants.
10. Never immerse the appliance into water or other liquid.
11. Only use water in this appliance. De-scaling products, perfume, detergent etc. should not be used with this appliance, in order to avoid damage.


NOTE: If the supply cord is damaged it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.


NOTE: Before each cleaning/maintenance and after each use unplug the appliance from the mains supply socket and let it cool down sufficiently.

NOTE: The liquid or steam must not to be directed towards equipment containing electrical components, such as the interior of ovens.

The filling aperture must not be opened during use.

 **WARNING:** The appliance heats up in the operation therefore do not touch the hot surface; use only the grasps or buttons. Always let the appliance cool down, before accessories are removed or attached from it.

 **ELECTRICAL WIRING:** This appliance must be attached to a mains supply socket with grounding, therefore it is equipped with a mains cable with ground wire.

 **WARNING:** Only a qualified person is allowed to check your mains supply socket. Never try to modify or change the mains plug of the appliance. Make sure that the supply voltage corresponds to the voltage marked on the rating label of the appliance.

PLEASE KEEP THESE INSTRUCTIONS FOR FURTHER USE.


3. Attaching the Accessories

! WARNING: For the sake of safety, the plug must be unplugged from socket before attaching the accessories.


! WARNING : This appliance should not be used directly on soft plastics, non pre-treated wood or cold glass. To ensure steam can be used on the desired surface a small test run should be conducted to prevent damage.

1. Long Nozzle

Insert the steam nozzle onto the main body (Fig.3/1).

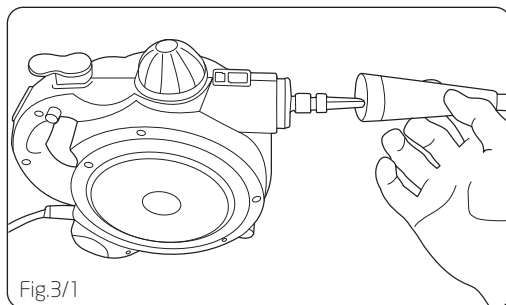


When the long nozzle reaches the jet nozzle base twist the long nozzle to the right until it locks safely into place.

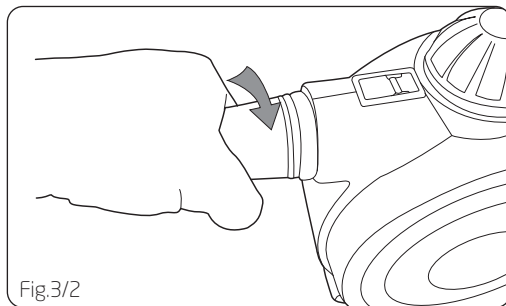


2. Detail Nozzle

The detail nozzle can be used to clean corners. Insert the detail nozzle on to the steam nozzle directly (Fig.3/3).

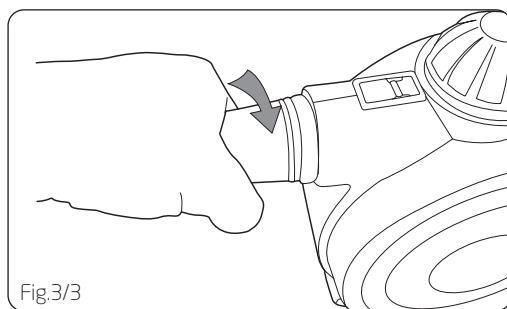


3. Stiff Bristle Brush

The nylon brush attachment can be used to clean coarse surfaces. Push the nylon brush nozzle (as with the detail nozzle) as far as it will go to fix into place (Fig.3/4).

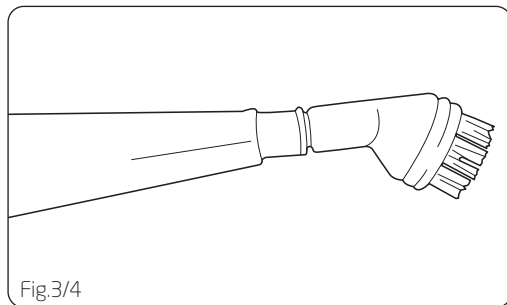


4. Upholstery Tool


The upholstery tool can be in conjunction with the window tool to clean windows and other smooth surfaces (Fig.3/5).

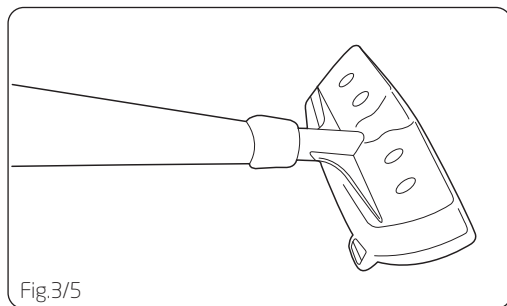

It can also be used with the cotton cloth for cleaning upholstery (Fig.3/6).

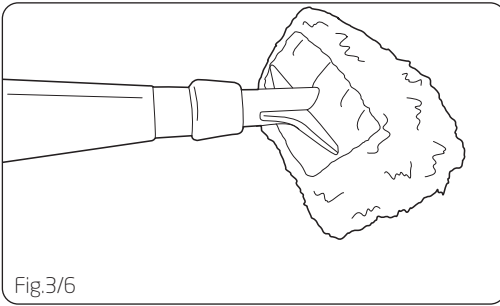


The Upholstery Tool is fitted by pushing it onto the nozzle. The cotton cloth is fitted by stretching it over the end of the upholstery tool. The window tool is fitted by clipping it onto the upholstery tool using the two bottom hooks and the large hook at the top to secure it.

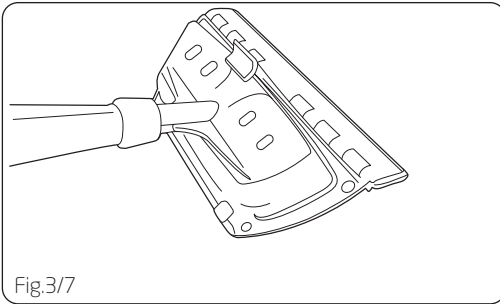


4. Preparation for Use


Press down the steam reservoir lid and turn to release.

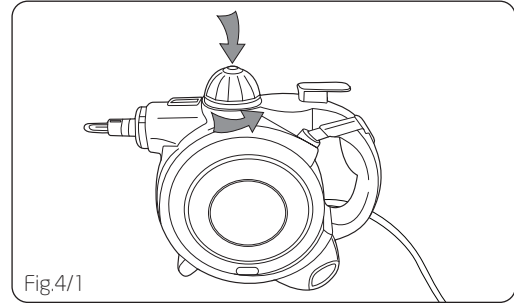

Remove the steam reservoir lid by twisting anti-clockwise. Fill with water using large jug and funnel.

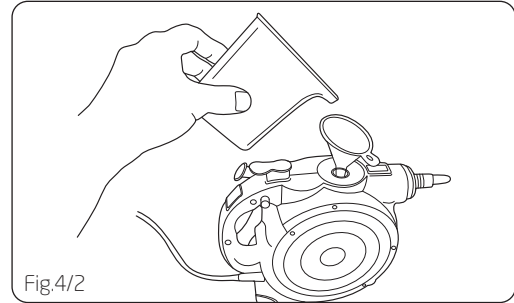

Replace lid. Pull out the spray reservoir (Fig.4/3).

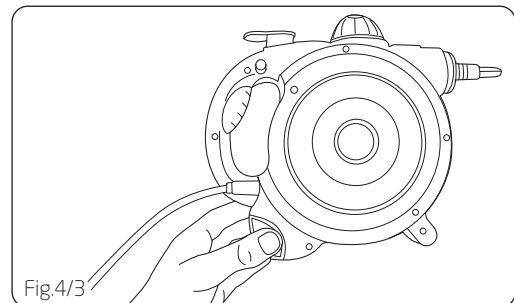

Fill spray reservoir using the small jug (Fig.4/4).

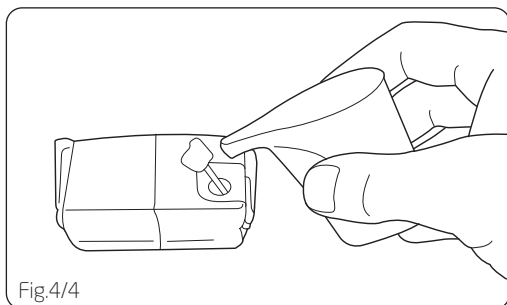


Fig.4/4

Replace reservoir. Connect the power supply. Wait for between 30 & 60 seconds for the water to heat and then depress and hold the steam trigger to release the steam (Fig.4/5).

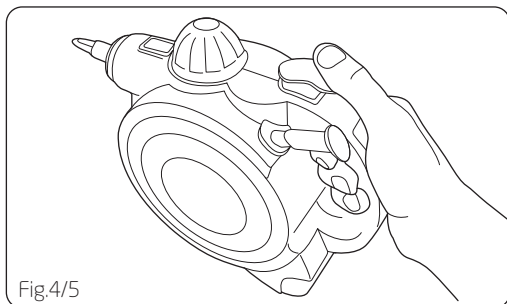


Fig.4/5

To spray a jet of water from the nozzle / tools, press the spray trigger (Fig.4/6).

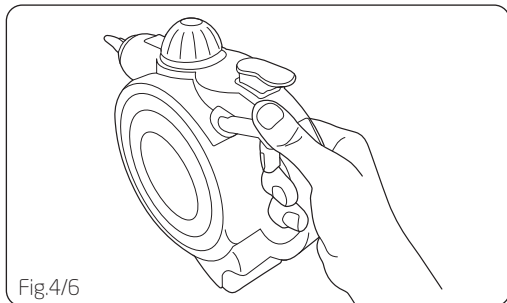


Fig.4/6

Please note the indicators at the base of the unit:

The right LED illuminates when the steamer is on. The left LED illuminates when the steamer is ready to use.

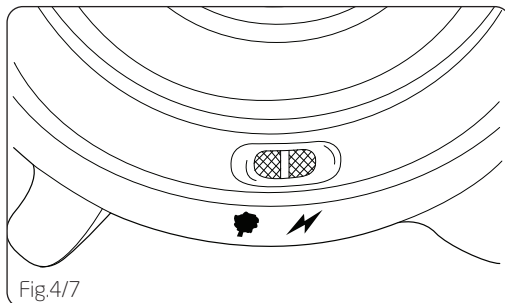



Fig.4/7

5. Troubleshooting

 **WARNING:** To reduce the risk of personal injury, unplug the vacuum cleaner before performing maintenance or troubleshooting checks.

PROBLEM: Appliance does not start.

Cause: Not properly plugged into electrical outlet.

Solution: Plug in firmly.

Cause: No electricity in electrical outlet.

Solution: Check fuse or breaker.

Cause: Internal fuse blown.

Solution: Have the fuse changed by a qualified electrician.

Cause: No water in reservoir.

Solution: Fill water reservoir.

PROBLEM: No steam

Cause: No water in reservoir.

Solution: Fill water reservoir.

PROBLEM: Water runs out from the nozzle.

Cause: Too much water in the reservoir.

Solution: Reduce water in the reservoir.

Cause: Appliance tilted too far

Solution: Hold appliance in an upright position.

Cause: Appliance not hot enough.

Solution: Let the appliance heat up for longer before depressing the steam trigger.

PROBLEM: Water 'cooks' during filling.

Cause: Water reservoir still hot.

Solution: Allow to cool before filling.

PROBLEM: Accessory comes loose.

Cause: Accessory not correctly attached

Solution: Refer to user guide for correct fitting information.

PROBLEM: All solutions exhausted, but steamer is still not working.

Cause: Appliance may be damaged.

Solution: Contact the Vax Careline.

6. UK Service & Help

Vax Care 0870 6061248

Monday-Friday 8.00am to 8.00pm

Saturday-Sunday 9.00am to 5.00pm

Any queries or concerns about using the Vax, call the Vax Careline. Calls are charged at the UK national rate.

Please make a note of the serial number and model number of the carpet cleaner before calling. There are over 400 approved Vax Service Agents in the UK. For the nearest Service Agent, please call the Vax Careline.

www.vax.co.uk

7. Technical Specification

Voltage: 220-240V ~50Hz

Wattage: 1200 W

Water volume: Steam Tank 260 ml
Spray tank 30 ml

Cord length: 3 m

Weight: 1.8 kg

Subject to technical change without notice.





EEC STATEMENT OF COMPLIANCE

Manufacturer/EEC importer: Vax Limited, hereby on our own responsibility, declare that the Vax V-084N Handheld Steam Cleaner is manufactured in compliance with the following Directives:

Safety: 2006/95/EC Low Voltage Directive

EMC: 2004/108/EC Electromagnetic Compatibility Directive



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

Vax Ltd., Kingswood Road, Hampton Lovett, Droitwich, Worcestershire, WR9 0QH, UK
email: info@vax.co.uk - website: www.vax.co.uk