




Vax Careline: (UK) 0844 412 8455  
(ROI) 1-800 928 308

# Carpet Washer







## WASH<sup>vax</sup>

Vax model number:  
V-020 Series

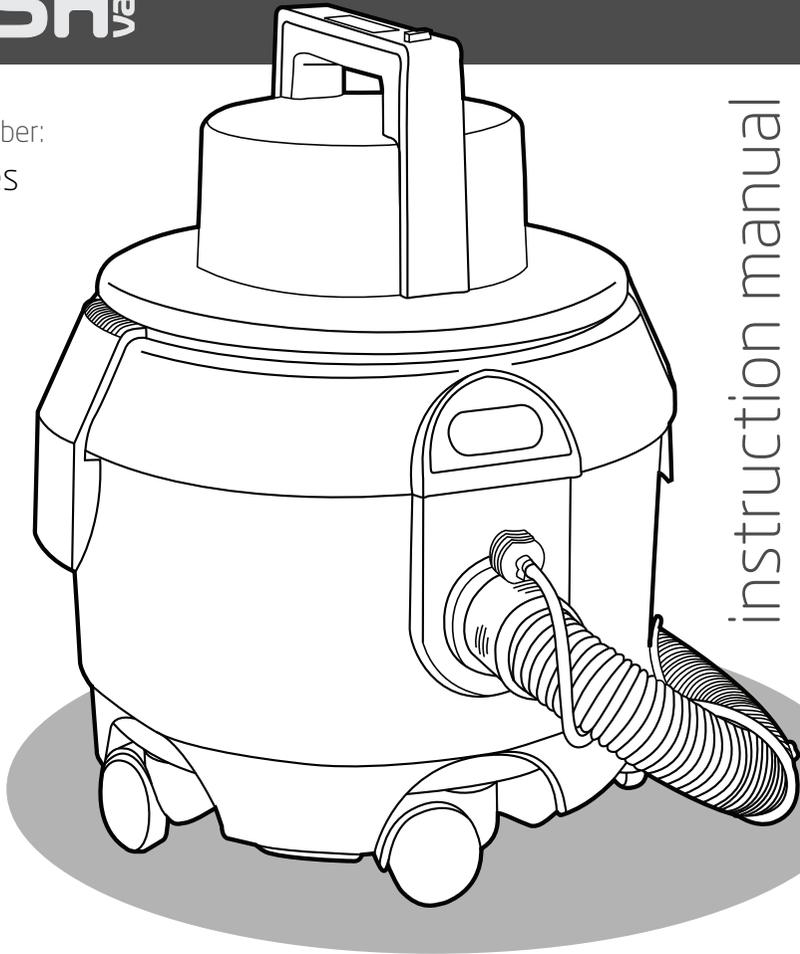

instruction manual

# 1. Diagram

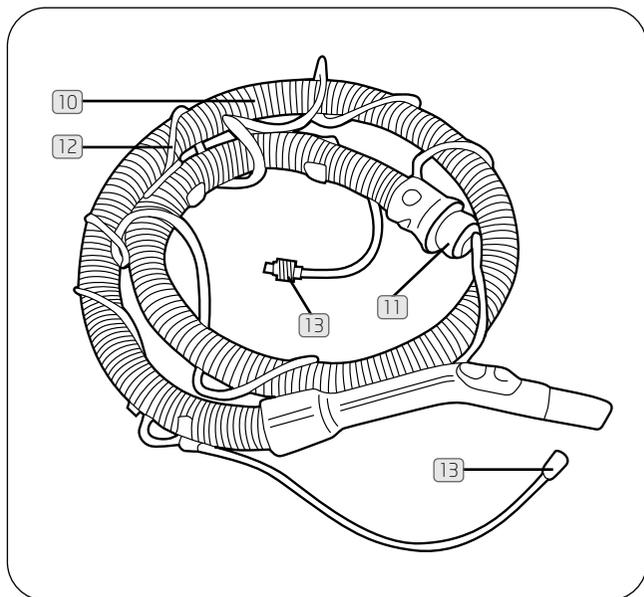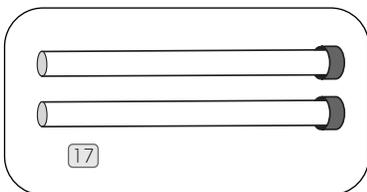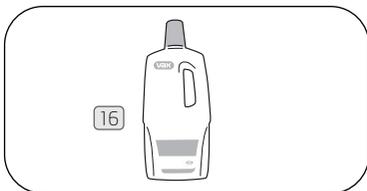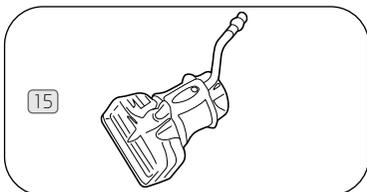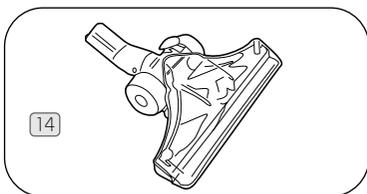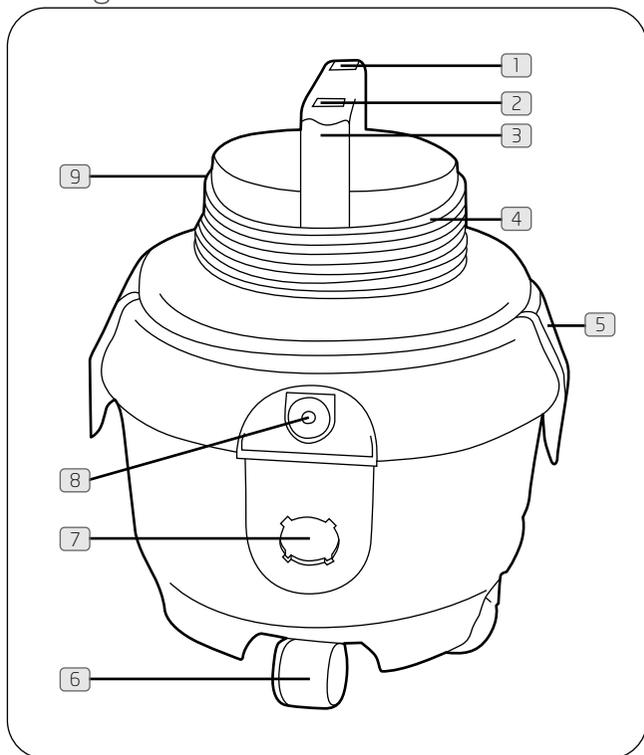

- 1 Power Button (Red)
- 2 Water Pump Button (Green)
- 3 Carry Handle
- 4 Power Cord
- 5 Container Release Clips
- 6 Casters
- 7 Hose Connection Port
- 8 Solution Tube Port
- 9 Exhaust Filter
- 10 Hose
- 11 Hose Cylinder Connector
- 12 Solution Tube
- 13 Solution Tube Connector
- 14 Fibreflow Wash Head
- 15 Wash Tool
- 16 Vax Cleaning Solution
- 17 2 Piece Extension Tube

## 2. Safety Information

### For Household Use Only

When using the carpet washer, basic safety precautions should always be observed, including the following:

1. Do not leave the carpet washer unattended when plugged in. Unplug it from socket when not in use.
2. To prevent electric shock do not use outdoors.
3. Not to be used as a toy. Close supervision is necessary when used by or near children or the infirm.
4. Use only as described in this manual.
5. The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
6. Do not use the carpet washer if it has been dropped, damaged, left outdoors or dropped into water. Do not use the vacuum cleaner with a damaged cord or plug. If the supply cord is damaged, it must be replaced by the manufacturer or a recommended Service Agent to avoid hazard and invalidating the guarantee.
7. Do not pull or carry by the cord, use the cord as a handle, allow the cord to come into contact with hot or sharp surfaces or close a door on the cord.
8. Do not unplug by pulling on the cord.
9. Do not handle the plug or carpet washer with wet hands.
10. Do not put any objects into openings or operate with openings blocked, keep them free of anything that may reduce airflow.
11. Keep hair, loose clothing, fingers and all parts of the body away from openings and moving parts.
12. Do not use the carpet washer on any glowing, burning or smoking particles.
13. Do not use without the clean water tank and dirty water tank in place.
14. Turn off all controls before unplugging.
15. Do not use to pick up flammable or combustible liquids such as petrol, or use in areas where they may be present.
16. Keep the carpet washer on the floor.
17. Do not use an extension cord.
18. Do not attempt to remove blockages with sharp objects as they may cause damage.

19. Store indoors put away after use to prevent tripping accidents.
20. Using improper voltage may result in damage to the motor and possible injury to the user. The correct voltage is listed on the rating label.
21. A hazard may occur if the carpet washer runs over the power supply cord.

 **NOTE: Carpets should be dry vacuumed thoroughly before washing.**

 **NOTE: If the supply cord is damaged, it must be replaced by the manufacturer, a Vax service agent or similarly qualified persons in order to avoid hazard.**

 **NOTE: The carpet washer must be unplugged from the mains socket outlet after use, and before cleaning or maintaining the carpet washer.**

 **IMPORTANT: This carpet washer is not intended for commercial use.**

### 3. Preparing the Carpet

**! IMPORTANT: Do not use the Carpet Washer as a dry vacuum.**

1. Dry vacuum carpet thoroughly.
2. Remove as much furniture from the room as possible. If you are unable to remove the furniture, place plastic or foil under and around the legs until the carpet has dried completely.

#### Helpful Hints for Carpet Cleaning:

1. Only use Vax carpet cleaning solution with this carpet washer.
2. Do not oversaturate carpet with cleaning solution while using the carpet washer.
3. For heavily soiled areas, additional applications may be necessary.
4. Allow plenty of time to dry carpet thoroughly.
5. Wipe cleaning solution from woodwork and wood to prevent any damage.
6. Try not to walk on carpet until it is completely dry.
7. After carpet is thoroughly dry, vacuum the carpet using a vacuum cleaner with a revolving brushbar.
8. Before cleaning, determine where to start and end, making sure not to walk over previously cleaned areas.


#### Check for Colour Fastness:

Before cleaning carpet, test for colour fastness. Dampen a white cloth with solution. Test a small area in a closet. Gently rub the cloth over the area. Check each colour for colour bleeding. If the cloth remains clean, it should be safe to clean the carpet.

### 4. Assembly


Push solution tube cylinder connector (A) firmly into solution port (A1).

Twist solution tube cylinder connector (A1) a quarter turn to the right to lock into place (Fig.4/1).

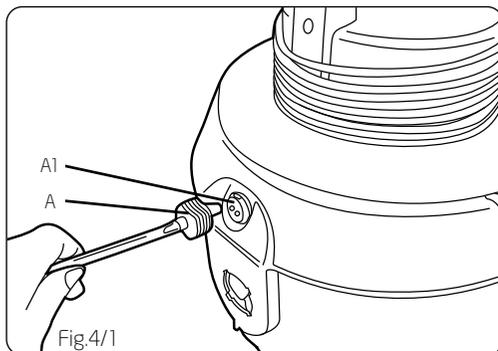


Push hose cylinder connector (B) firmly into hose connection port (B1).

Twist to the right until hose cylinder connector locks into place (Fig.4/2).

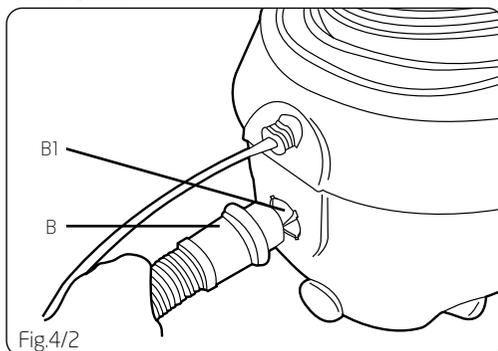

Wrap solution tube (A) around hose (B). Ensure that the solution tube is wrapped loosely enough to allow the solution to flow freely through the tube (Fig.4/3).

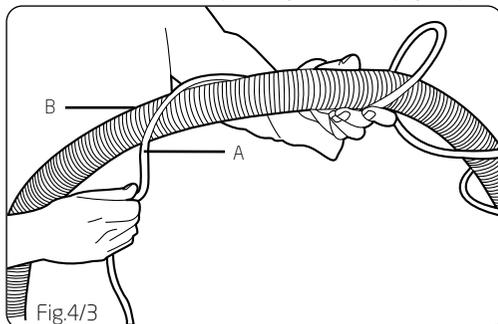

After wrapping the tube around the hose, affix solution tube (A) to hose (B) using clips provided (C) to hold it in place (Fig.4/4).

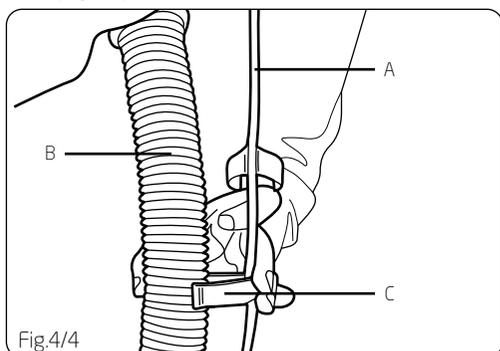


Fig.4/4

Push end of solution tube onto connective valve on the wash tool (Fig.4/5).

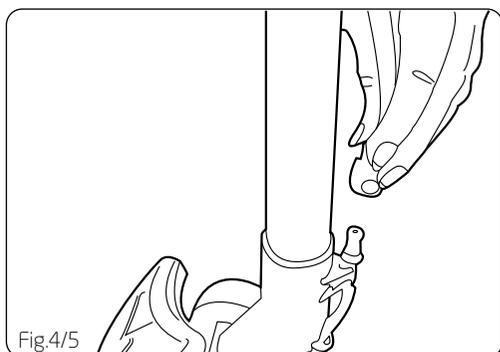


Fig.4/5

## 5. Usage

Plug in machine to power supply.

Press the red button to turn on the power.

Press the green button to activate the pump.

On the Fibreflow wash head ensure that the rocker switch (A) is towards the back of the head to allow water to flow through the head (Fig.5/1).

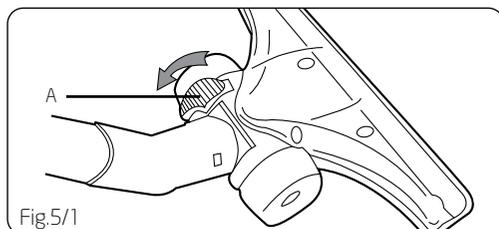


Fig.5/1

In order to help suck up excess water, the rocker switch (A) can be pushed to the front position on the Fibreflow wash head. This will prevent water flow, allowing excess water to be removed (Fig.5/2).

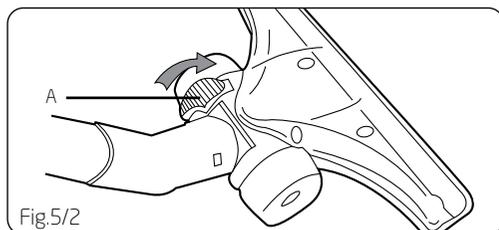


Fig.5/2

In order to wash upholstery, including stairs and soft furnishings simply detach Fibreflow wash head from wand and solution tube and replace with wash tool as shown (Fig.5/3).

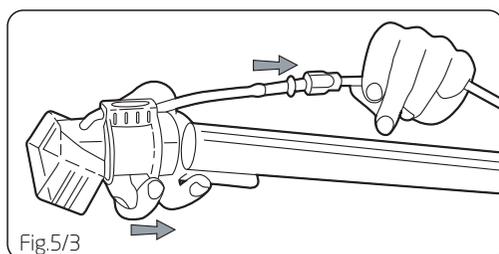


Fig.5/3

**!** NOTE: Do not store cleaner with solution in clean water tank or dirty water in dirty water tank. Mineral deposits and mildew can form which will affect the performance of the carpet washer.

## 6. Troubleshooting

 **WARNING:** To reduce risk of personal injury, unplug carpet washer before servicing.

### PROBLEM: The cleaner won't run

**Cause:** Not properly plugged into electrical outlet.

**Solution:** Plug in firmly.

**Cause:** No electricity in electrical outlet.

**Solution:** Check fuse or breaker.

**Cause:** On/off switch not turned on.

**Solution:** Push on/off switch to 'on'.

**Cause:** Blown fuse/tripped breaker.

**Solution:** Reset circuit breaker or replace fuse.

### PROBLEM: Cleaner/accessories won't pick up

**Cause:** Accessories not attached correctly.

**Solution:** Refer to page 6 for fitting information.

**Cause:** The hose is clogged.

**Solution:** Remove the hose and tools. Remove the obstruction.

## 7. UK Service & Help

**Vax Careline** (UK) 0844 412 8455  
(ROI) 1-800 928 308

Monday-Friday 8.30am to 6.30pm

Saturday-Sunday 9.00am to 5.00pm

If you have any queries or concerns about using your carpet washer, call the Vax Careline. Calls are charged at the UK national rate.

Please make a note of the serial number and model number of the carpet cleaner before calling. For the nearest Service Agent, please call the Vax Careline.

[vax.co.uk](http://vax.co.uk)

## 8. Technical Specification

Voltage:	220 ~ 240V 50Hz
Wattage:	1300W
Clean water tank volume:	4 litres
Dirty water tank volume:	4 litres
Cord length:	10m
Weight:	7.7Kg

Subject to change without notice.





## EEC STATEMENT OF COMPLIANCE

Manufacturer/EEC importer: Vax Limited, hereby on our own responsibility, declare that the V-020 Series Carpet Washer is manufactured in compliance with the following Directives:

**Safety:** 2006/95/EC Low Voltage Directive

**EMC:** 2004/108/EC Electromagnetic Compatibility Directive



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.