

vax
ONE
PWR
CORDLESS

vax
SPOTLESSGO

**POWERFUL CORDLESS
SPOT WASHER**

USER GUIDE



CLSW-SGKS
CLSW-SGBS

This machine is intended for household use only and NOT for commercial or industrial use.

PLEASE KEEP INSTRUCTIONS FOR FURTHER USE AND USE ONLY AS INSTRUCTED IN THIS GUIDE.

DON'TS

- Don't leave the charger plugged in when unattended.
- Don't use the machine if it is faulty or has been dropped, damaged or left outdoors.
- Don't use the machine to pick up any flammable or combustible materials (lighter fluid, petrol, kerosene etc.) or use the machine in an area with explosive vapours or liquid.
- Don't use the machine to pick up hot coals, cigarette butts, matches or smoking hot burning items or use in an area where there may be harmful fluids (chlorine, bleach and ammonia drain cleaner).
- Don't use the machine outside during wet weather conditions.
- Don't handle the charger, battery or use the machine with wet hands.
- Don't unplug the charger by pulling on the power cord.
- The power cord cannot be replaced. If the cord is damaged the charger should be scrapped.
- Don't attempt to remove blockages with sharp objects as this may cause damage to the machine.
- Don't use the machine with the incorrect battery or charger as this may result in damage or injury to the

user. The correct battery charger information is listed on the battery pack ratings label.

- Don't charge the battery outdoors, or leave the charger connected to the mains when not in use.
- Don't use the machine with a damaged battery. If the battery is damaged contact **08000 927737**.
- Don't carry the machine while it's switched on.
- Don't use on a surface that is damaged, uneven or incorrectly fitted.

DO'S

- Only VAX ONEPWR batteries (BV15020/BV15030/BV25040) and charger (BV05100UK) should be used with this machine.
- Always stand the charger on a stable, level surface, uncovered and away from any heat source.
- Only VAX ONEPWR recommended tools and accessories should be used with this machine.
- Refer to the floor/surface manufacturer's care recommendations before use. Test your flooring/surface - run the machine over a small hidden area, if no damage or discolouration occurs continue cleaning. Not suitable for use on water sensitive flooring.
- Always remove the battery from the machine before carrying out any maintenance or if storing unused for a long period of time.

- Keep all openings clear and free from debris as this may affect the airflow/suction.
- Turn off all controls on the machine before disconnecting or connecting the battery.
- Store the machine in a cool, dry area. Before storing ensure all water/solution tanks and filters are thoroughly clean and dry.
- This machine is not intended to be used or cleaned by persons with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given instructions concerning the safe use of the machine by a person legally responsible for their safety. They should be supervised whilst using the machine. Children shall not use, clean or play with this machine, which when not in use should be secured out of their reach.
- Keep fingers, hair and loose clothing away from moving parts and openings whilst using the machine.
- Use only CE approved 13amp extension cords, non-approved extension cords may overheat. Care should be taken to arrange the extension cord as it can be a trip hazard.
- The water/solution tank should be filled with warm water (max 40°C) only. Filling the water/solution tank with hot or boiling water will damage the machine and invalidate the guarantee. Always use the machine with all water/solution tanks and filters in place.

- Only VAX recommended solution should be used with the machine. Using other solutions may invalidate the guarantee (see page 7).
- Always use the machine in an upright position. To prevent motor damage from dirty water, never hold the machine upside down or on its side. Always stand the machine on a stable, level surface.

BATTERY SAFETY PRECAUTIONS

- This machine is intended for indoor cleaning and vehicle interiors during dry weather conditions.
- Replace the battery with a VAX ONEPWR battery only. Use of another battery may present a risk of fire or explosion.
- Do not attempt to disassemble the battery, remove any component projecting from the battery terminals and do not dispose of in a fire. The battery and charger have no user serviceable parts. Fire or injury may result.
- Prior to disposal, protect exposed terminals with heavy insulating tape to prevent shorting. The battery is to be disposed of safely at your local battery recycling centre.
- When the battery pack is not in use, keep it away from other metal objects that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
- In case of battery leakages, avoid any contact with skin and contact us on: **08000 927737**.

WARRANTY

If a VAX ONEPWR machine is used in the way it is intended and it breaks down within the guarantee period, it's our responsibility to repair or replace it. Here's what isn't covered:

- Normal wear and tear of consumable items, for example: belts, filters, brushbars, fuses etc.
- Batteries which have become faulty as a result of improper handling.
- Batteries which have a reduced service life as a result of normal wear.
- Accidental damage
 - Damage as a result of use not in accordance with the product user guide.
 - Damage caused by not carrying out regular maintenance.
 - Damage to the charger cable.
 - Blockages caused by misuse.

- Faults caused by:
 - Negligent use, misuse, neglect or careless operation of the machine.
 - Use of the machine cleaner which is not in accordance with the user guide.
 - Use of a VAX ONEPWR machine for anything other than normal domestic household purposes in the country in which it was purchased.
 - Use of parts, accessories and consumables, which are not genuine VAX components.
 - Faulty installation or repairs – unless carried out by a qualified electrician or engineer.

TECHNICAL

EU Statement of Compliance: Manufacturer/EU importer: VAX Limited, hereby on our own responsibility, declare that the VAX ONEPWR SpotlessGo is manufactured in compliance with the following Directives:

Safety: 2014/35/EU Low Voltage Directive.

EMC: 2014/30/EU Electromagnetic Compatibility Directive.



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

VAX is a trade mark of Techtronic Cordless GP.

© 2020 Techtronic Cordless GP. All rights reserved.

VAX Ltd, Artillery House, Heritage Way, Droitwich, WR9 8YB, UK.



- 1 Carry handle
- 2 Power ON/OFF
- 3 Dirty water tank release latch
- 4 Battery dock (hidden)
- 5 Main unit
- 6 Water/solution tank
- 7 Dirty water tank
- 8 Wash tool
- 9 Hose
- 10 Multi-purpose attachment
- 11 Squeegee attachment
- 12 Hard floor scrub attachment
- 13 ONEPWR Battery*
- 14 ONEPWR Charger*
- 15 250ml VAX Solution



10



11



12



13



14



15



TECHNICAL SPECIFICATION

VAX ONEPWR SpotlessGo

Weight (without battery pack)	2.9kg
Water/solution tank capacity	225ml
Dirty water tank capacity	295ml

Runtime and charge time dependent on battery pack used.


*Included with model CLSW-SGKS only.

Subject to technical change without notice. Images are illustrative only.


CHARGING THE BATTERY

THIS MACHINE IS ONLY TO BE USED WITH VAX ONEPWR BATTERIES AND CHARGER. PLEASE READ THE SAFETY GUIDE BEFORE USE.

NOTE: Before first use, ensure the battery is fully charged. Failure to fully charge the battery before first use may result in poor battery performance. The life expectancy of the battery will vary depending on the usage of the machine.

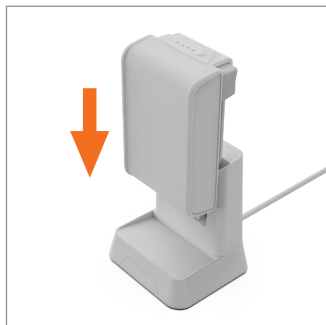

Slide the battery down on to the charger.

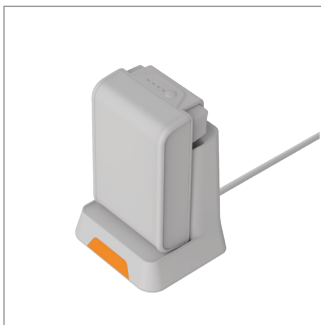

The charger light will flash white to show when the battery is charging. The light on the charger will stop flashing and go off when the battery is fully charged.



Once fully charged, slide the battery off the charger to remove.




To check the battery charge level press the battery symbol.

ASSEMBLY



Pull to open the battery cover.

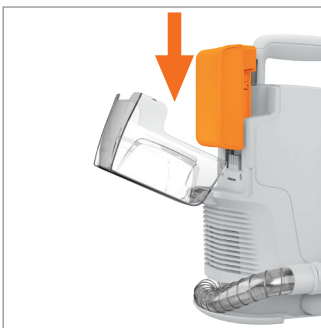

Holding the cover open, slide the battery into the machine until it clicks into place.



Close the battery cover.

IMPORTANT: Before using the machine to clean dried-on stains and dirt, the flooring should be vacuumed thoroughly.

- Test for colourfastness - Wet a white absorbent cloth with the solution. In a small hidden area of your carpet/rugs/upholstery/hard floors, gently rub with the dampened cloth. Wait ten minutes and check for colour removal or bleed with white paper towel or cloth. Check all carpets/rugs/upholstery material before first use and if your carpet has more than one colour, check all colours.
- Test all carpets/rugs/upholstery/hard floors before use. Test the spot washer on a small hidden area. If no damage or pile distortion occurs continue cleaning.
- Move furniture out of the area to be cleaned. If the furniture cannot be moved, place aluminium foil or wax paper under the legs. This will prevent wood finishes from staining your carpet. Pin up furniture skirts and curtains.
- When using the spot washer, basic safety precautions should always be observed and don't over saturate your carpets/rugs/upholstery/hard floors.
- Only use VAX ONEPWR Multi-floor Solution, VAX Spot Washer Antibacterial Cleaning Solution or VAX Spot Washer Cleaning Solution. Using other solutions may cause excess foaming and will invalidate your guarantee.
- The water/solution tank should only be filled with warm water (max 40°C). Filling the water/solution tank with hot/boiling water will damage your washer and invalidate the guarantee.

OPERATION



Lift to remove the water/solution tank from the side of the machine.



Unscrew the cap and fill to the water and solution markers on the tank.



Replace the cap tightly and push the tank down on to the machine until it clicks into place.



Press the on/off button to switch the washer on.

IMPORTANT: Your dirty water tank is fitted with a float. When the dirty water tank is full, the float will shut off the suction on the spot washer. You will be able to hear if this has happened as the motor noise on the washer will increase. Once the float is activated, empty the dirty water tank if full.


If the dirty water tank is not full then turn off your washer at the power switch and wait for the float to settle.

NOTE: For heavily soiled areas, it may be necessary to repeat the cleaning process.
Make criss-crossing strokes across the original pattern and overlap with each pass.

OPERATION




Lift the wash tool and hose out of the holder to release from the side of the machine.

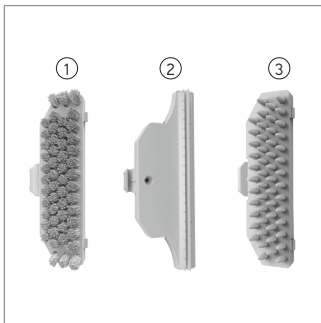

Select the desired tool attachment.

- ① **Multi-purpose Attachment**
For cleaning carpets, rugs, sofas and upholstery.
- ② **Squeegee Attachment**
For cleaning patio doors, windows, glass and hard floor spill pick up.
- ③ **Hard Floor Scrub Attachment**
For cleaning tiles and sealed wooden floors.

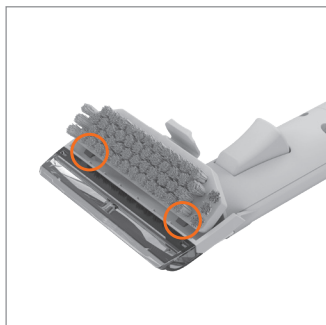


Hook the tabs on the selected attachment into the wash tool and clip into place.




Press the trigger on the wash tool to release water and solution.



Use the brush to agitate any stubborn stains.

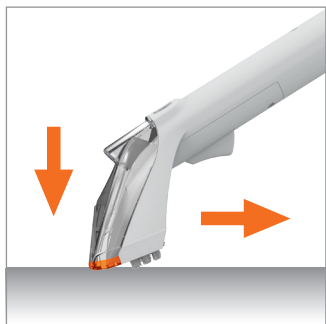

Release the trigger and tilt the nozzle forwards so the nozzle is in contact with the surface. Pull back to recover the water and solution.

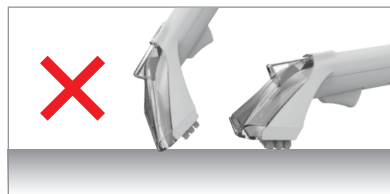

IMPORTANT: Over or under tilting the hand tool may result in poor water pick up.

WARNING: Always switch off the machine and remove the battery before carrying out any maintenance or troubleshooting.

IMPORTANT: Empty and rinse out the water/solution tank and dirty water tank and leave to air dry before replacing.

Do not leave solution stored in the tanks between uses.

EMPTYING AND CLEANING THE DIRTY WATER TANK



Press the dirty water tank release latch and pull the tank to remove.



Lift the lid to remove from the dirty water tank.



Empty the dirty water over the sink. Rinse the dirty water tank and lid under water (max 40°C) to remove dirt/debris.



Replace the lid.



To re-fit, tilt the dirty water tank and line the front of the tank up onto spot washer. Push back until it clicks into place.

WARNING: Always switch off the machine and remove the battery before carrying out any maintenance or troubleshooting.

CLEANING THE FILTER



Press the dirty water tank release latch and pull the tank to remove.



Remove any dirt and debris from the filter located underneath the dirty water tank.

NOTE: Before using the machine to clean dried-on stains and dirt, the flooring should be vacuumed thoroughly. This will prevent a build up of dirt and debris in the hose and nozzle.

IMPORTANT: If the nozzle is fitted incorrectly, this will cause poor dirty water pick up.

CLEANING THE WASH TOOL NOZZLE AND ATTACHMENTS



Push the button on the wash tool to release the nozzle.



Rinse the attachments and the nozzle under warm water (max 40°C) to remove dirt/debris.



Refit the nozzle onto the wash tool.

CLEANING AND REMOVING BLOCKAGES IN THE HOSE



Press the dirty water tank release latch and pull the tank to remove.



Release the hose from the side of the washer.



Lie the washer on to its side and undo the 3 screws on the base.



Pull to remove the hose assembly away from the base of the washer.



Rinse the hose under warm water (40°C) to remove any dirt and debris.

THERE IS AN ACCESSORY MISSING

Check the contents on the back of the box.

WHY DOES THE MACHINE HAVE NO POWER?

- The battery is not fitted correctly. See ASSEMBLY page 6.
- The battery has no charge. See CHARGING THE BATTERY page 6.

WHY WON'T THE SOLUTION/WATER DISPENSE?

- Squeeze the trigger on the hose to release solution and water mix.
- Make sure the water/solution tank is fitted securely. See OPERATION page 7.
- The water/solution tank valve may be stuck, hold the water/solution tank over the sink and press the valve underneath to release.
- The water/solution tank is empty. Refill the tank. See OPERATION page 7.

WHY WON'T THE SPOT WASHER PICK UP?

- The float in the dirty water tank may have been activated. Empty the dirty water tank and wait for the float to settle before re-starting your machine.
- The nozzle may not be in contact with the surface, tilt the nozzle forwards. See OPERATION page 8.
- Check the hose for blockages and clear. See CLEANING AND REMOVING BLOCKAGES FROM THE HOSE page 11.
- Check the nozzle for blockages and clear. See CLEANING THE WASH TOOL NOZZLE page 10.
- The dirty water tank may not be assembled correctly or the lid may not pushed down securely. See EMPTYING AND CLEANING THE DIRTY WATER TANK page 9.
- Check the nozzle is correctly fitted. See CLEANING THE WASH TOOL NOZZLE page 10.
- Check the filter located under the dirty water tank for dirt and debris. See CLEANING THE FILTER page 10.

Don't forget your solution!

Order at: www.vax.co.uk/spares-and-solutions

VAX ONEPWR Multi-floor Solution (1l)

1-9-142276



Together with the ONEPWR Multi-floor Solution, the VAX SpotlessGo will not only help tackle stains, but also remove over 99% of bacteria.

VAX Spot Washer Cleaning Solution (1l)

1-9-142410



Perfect for cleaning rugs, carpets and upholstery around the home. Specifically formulated for use with VAX SpotWash to target spills and stains.