

vax[®]
ONE
PWR
CORDLESS

vax
EVOLVE

Cordless Vacuum

USER GUIDE



CLSV-LXKS
CLSV-LXBS

SAFETY GUIDE

This machine is intended for household use only and NOT for commercial or industrial use.

PLEASE KEEP INSTRUCTIONS FOR FURTHER USE AND USE ONLY AS INSTRUCTED IN THIS GUIDE.

The full user guide can be found at: support.vax.co.uk

DON'TS

- Don't leave the charger plugged in when unattended.
- Don't use the machine if it is faulty or has been dropped, damaged or left outdoors.
- Don't use the machine to pick up any flammable or combustible materials (lighter fluid, petrol, kerosene etc.) or use the machine in an area with explosive vapours or liquid.
- Don't use the machine to pick up hot coals, cigarette butts, matches or smoking hot burning items or use in an area where there may be harmful fluids (chlorine, bleach and ammonia drain cleaner).
- Don't handle the charger, battery or use the machine with wet hands.
- Don't unplug the charger by pulling on the power cord.
- The power cord cannot be replaced. If the cord is damaged the charger should be scrapped.
- Don't attempt to remove blockages with sharp objects as this may cause damage to the machine.
- Don't use the machine with the incorrect battery or charger as this may result in damage or injury to the user. The correct battery charger information is listed on the battery pack ratings label.
- Don't charge the battery outdoors, or leave the charger connected to the mains when not in use.
- Don't use the machine with a damaged battery. If the battery is damaged contact us on: **08000 927737**
- Don't use on a surface that is damaged, uneven or incorrectly fitted.
- The brushbar constantly rotates in carpet and hard floor mode. Never use on one spot for any prolonged period of time as this may damage the floor surface.
- Don't use the machine on stairs.

DO'S

- Only VAX ONEPWR batteries (BVXXXXX) and chargers (BV05XXX) should be used with this machine.
- Always stand the charger on a stable, level surface, uncovered and away from any heat source.
- Always remove the battery from the machine before carrying out any maintenance or if storing unused for a long period of time.
- Keep all openings clear, free from debris and don't overfill the dirt container as this may affect the airflow/suction.
- Turn off all controls on the machine before disconnecting or connecting the battery.
- This machine is not intended to be used or cleaned by persons with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given instructions concerning the safe use of the machine by a person legally responsible for their safety. They should be supervised whilst using the machine. Children shall not use, clean or play with this machine, which when not in use should be secured out of their reach.
- Only use the machine indoors on dry surfaces and keep the area you're cleaning well lit.
- Always use the correct mode for your flooring and check the suitability with the flooring manufacture before use. To prevent any damage being sustained, test on a inconspicuous area of the flooring/surface first.
- Always make sure the separator and filter are fitted correctly before using your machine and only use the machine with the filter and separator in place.
- Always check that the floorhead and brushbar are free from damage, dirt and debris before using.
- Keep fingers, hair and loose clothing away from moving parts and openings whilst using the machine.
- Store the machine in a cool, dry area. Keep the machine away from rain and moisture.
- Use only CE approved 13amp extension cords, non-approved extension cords may overheat. Care should be taken to arrange the extension cord as it can be a trip hazard.

BATTERY SAFETY PRECAUTIONS


- Replace the battery with a VAX ONEPWR battery only. Use of another battery may present a risk of fire or explosion.
- Don't attempt to disassemble the battery, remove any component projecting from the battery terminals and do not dispose of in a fire. The battery and charger have no user serviceable parts. Fire or injury may result.
- Prior to disposal, protect exposed terminals with heavy insulating tape to prevent shorting. The battery is to be disposed of safely at your local battery recycling centre.
- When the battery pack is not in use, keep it away from other metal objects that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
- In case of battery leakages, avoid any contact with skin and contact us on:

08000 927737

Welcome to the VAX family!

You are now the proud owner of a VAX Evolve.

Here, you'll find everything you need to know about your machine and, most importantly, instructions on how to get started so that you can get cleaning!

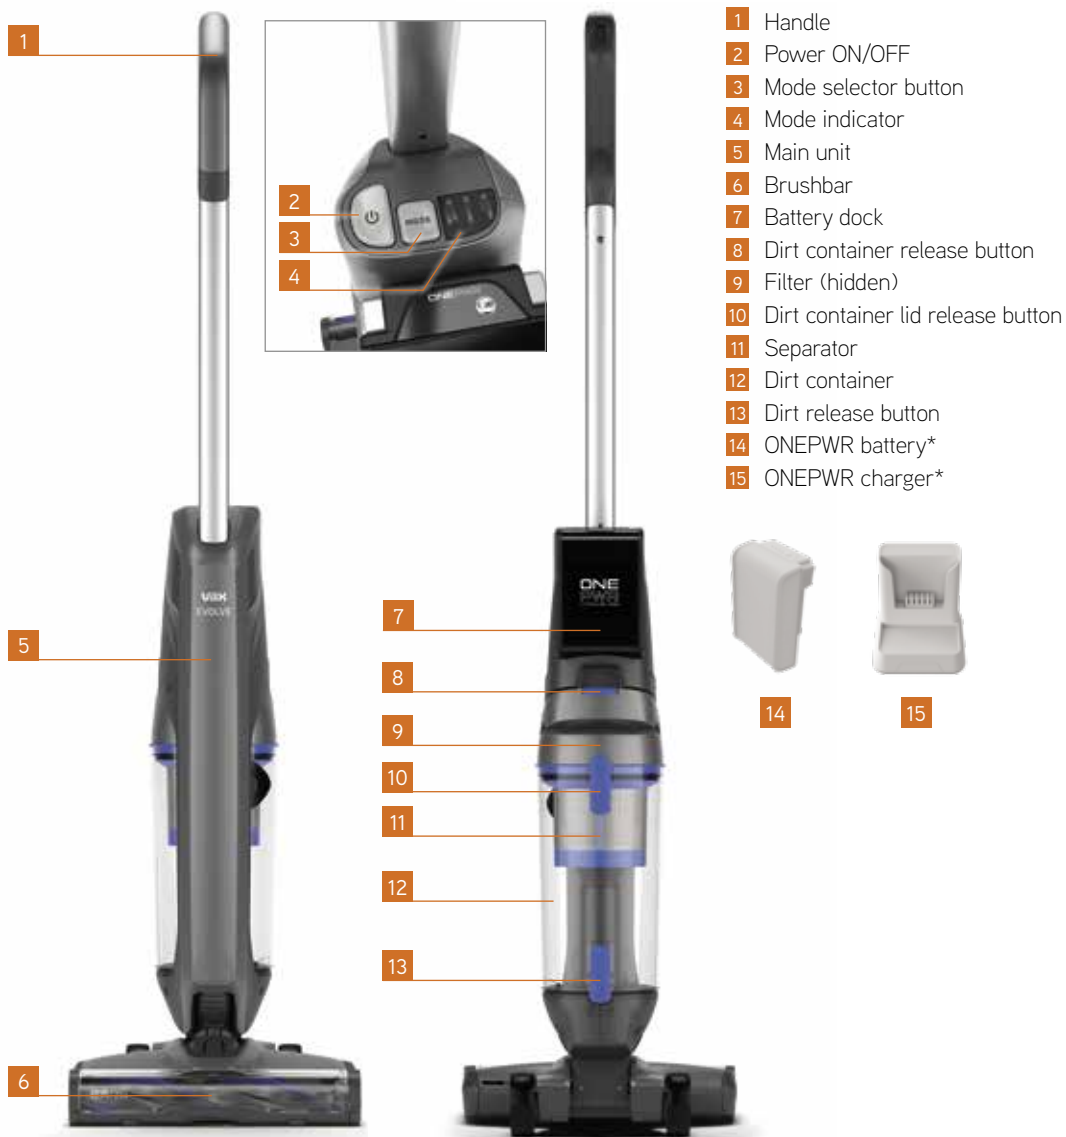

Weight 3.2kg (without battery pack). Dirt bin capacity 1.2L.

Runtime and charge time dependent on battery pack and mode used. *Included with model CLSV-LXKS only.

Subject to technical change without notice. Images are illustrative only.

Quick Start


1 Assembly

Attach the handle to the main body of the machine until it clicks into place



2 Charging the battery

Charge the battery for 3 hours before use*

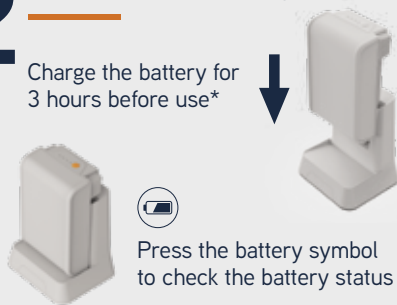

Press the battery symbol to check the battery status

3 Operation

Switch on the machine and select a mode

HARD FLOOR

CARPET

BRUSH OFF

For delicate floors and flooring not suitable for use with a rotating brushbar



Registration & Support

All ONEPWR products come with a standard one year warranty

Register your product to receive 2 YEARS FREE additional warranty[†]

For details visit: vax.co.uk/registration

Scan here



For help and support with your new product

or visit us online: support.vax.co.uk

Still need to get in touch?

Our UK based Customer Care Team are here to support you. For help with assembly, operational or performance problems, or buying and fitting new accessories, you can find all our contact details at vax.co.uk/contact

This user guide can be found online at: support.vax.co.uk

[†] Registration required. Terms and conditions apply, see vax.co.uk for details.

WARRANTY & TECHNICAL

WARRANTY

If a VAX ONEPWR machine is used in the way it is intended and it breaks down within the guarantee period, it's our responsibility to repair or replace it. Here's what isn't covered:

- Normal wear and tear of consumable items, for example: belts, filters, brushrolls, fuses etc.
- Batteries which have become faulty as a result of improper handling.
- Batteries which have a reduced service life as a result of normal wear.
- Accidental damage
 - Damage as a result of use not in accordance with the product user guide.
 - Damage caused by not carrying out regular maintenance.
 - Damage to the charger cable.
 - Blockages caused by misuse.

- Faults caused by:
 - Negligent use, misuse, neglect or careless operation of the machine.
 - Use of the machine cleaner which is not in accordance with the user guide.
 - Use of a VAX ONEPWR machine for anything other than normal domestic household purposes in the country in which it was purchased.
 - Use of parts, accessories and consumables, which are not genuine VAX components.
 - Faulty installation or repairs – unless carried out by a qualified electrician or engineer.

TECHNICAL

Statement of Compliance: Manufacturer/EU importer: VAX Limited, hereby on our own responsibility, declare that the **VAX Evolve** is manufactured in compliance with the following Legislation:

Safety: 2014/35/EU Low Voltage Directives/Electrical Equipment (Safety) Regulations 2016. EMC: 2014/30/EU Electromagnetic Compatibility Directive/Electromagnetic Compatibility Regulations 2016.



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

VAX is a trade mark of Techtronic Cordless GP.


© 2021 Techtronic Cordless GP. All rights reserved.

VAX Ltd, Artillery House, Heritage Way, Droitwich, WR9 8YB, UK.


CHARGING THE BATTERY

THIS MACHINE IS ONLY TO BE USED WITH VAX ONEPWR BATTERIES AND CHARGER. PLEASE READ THE SAFETY GUIDE BEFORE USE.

NOTE: Before first use, ensure the battery is fully charged. Failure to fully charge the battery before first use may result in poor battery performance. The life expectancy of the battery will vary depending on the usage of the machine.

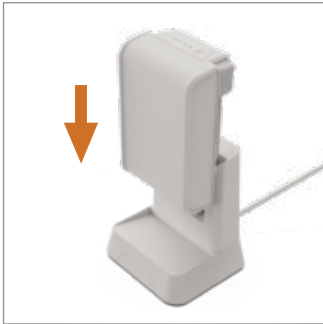

Slide the battery down on to the charger until it clicks into place.

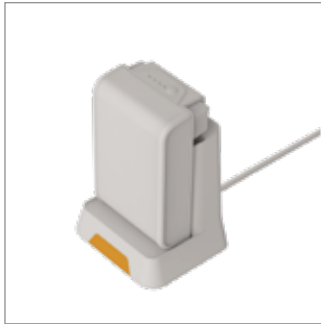

The charger light will flash white to show when the battery is charging. The light on the charger will stop flashing and go off when the battery is fully charged.




Once fully charged, slide the battery off the charger to remove.



To check the battery charge level press the battery symbol.

ASSEMBLY

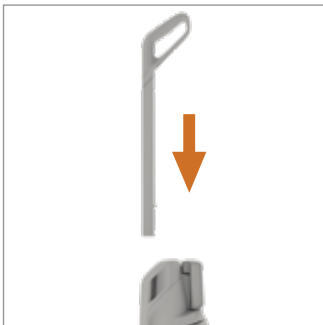

Push the handle into the main body until it clicks into place.

GETTING STARTED

OPERATION

WARNING: The brushbar constantly rotates in carpet and hard floor mode. Never use on one spot for any prolonged period of time as this may damage the floor surface. To prevent any damage being sustained test on an inconspicuous area of the flooring first.



Slide the battery onto the machine until it clicks into place.



Place your foot on the floorhead.



Pull the handle backwards to recline.



Press the on/off button to switch the machine on.



Press the mode selector button to switch between modes.



To remove the battery press both the buttons to release.

HARD FLOOR

CARPET

BRUSH OFF

For delicate floors and flooring not suitable for use with a rotating brushbar.

WARNING: Always remove the battery before carrying out any maintenance or troubleshooting.

EMPTYING THE DIRT CONTAINER

CAUTION: Don't over fill the dirt container to avoid blocking the air flow through the machine. For best cleaning results, empty the dirt container after every use. Filters should be tapped over a bin every 4-6 uses to remove dirt and debris and washed every 3 months. Filters should be replaced every 6-9 months depending on the level of use.



Press down the dirt container release button and pull the container to remove.



Hold the dirt container over a bin and press the dirt release button to allow dirt and debris to fall out. To close, push the dirt release door until it clicks into place.



To re-fit, tilt the dirt container and line the front of the container up onto machine. Push back until it clicks into place.

CLEANING & MAINTENANCE

CLEANING THE FILTER AND SEPARATOR



Press down the dirt container release button and pull the container to remove.



Press the button on the lid of the dirt container and lift the lid to access the filter. Pull the tab on the filter to remove.



Lift the separator from the dirt container.



Tap the filter and separator against a bin to remove dirt and debris. Wipe over the separator metal shroud with a dry cloth.



Wash the filter under running water (40°C max). Leave for at least 24hrs or until fully dry before replacing.

CAUTION: Ensure both the filter and separator are refitted before use.

REMOVING AND CLEANING THE BRUSHBAR

WARNING: Always remove the battery before carrying out any maintenance or troubleshooting.


CAUTION: If the brushbar has been obstructed, the brushbar motor protection sensor may activate and the brushbar will stop. To reset clear any obstruction and wait 1 minute before switching the machine on. For best performance and to reduce hair/dirt build up, remove and clean the brushbars every 1-2 months (depending on the level of use).



Lie the machine on its back.



Turn the tab on the brushbar cover anticlockwise to release the brushbar.

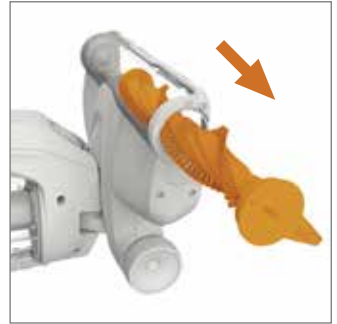

Pull the brushbar out from the housing.



To remove any threads or hair, slide the blade of a pair of scissors into the groove on the brushbar and cut along the groove.



Clear any dirt/debris from the end caps and inside the housing of the floorhead.



Refit the brushbar into the floorhead.



Align the arrow on the brushbar cover to the unlock symbol. Push firmly and twist the tab clockwise so the arrow is pointing to the lock symbol.

CLEANING & MAINTENANCE

CHECKING FOR BLOCKAGES



Press down the dirt container release button and pull the container to remove.



Place your foot on the floorhead. Pull the handle backwards to recline and lie flat.



Press the hose release button and pull to release.



Check for any blockages and use a blunt object to remove the blockage.

THERE IS AN ACCESSORY MISSING

Check the contents on the box.

WHY DOES THE MACHINE HAVE NO POWER?

- The battery is not fitted correctly. See OPERATION page 7.
- The battery has no charge. See CHARGING THE BATTERY page 6.
- The motor thermostat may have tripped. Empty the dirt container and check for blockages. Clean the filters and allow the machine to cool for approximately 1 hour. If you have washed the filters, wait 24 hours to fully dry before placing back on the machine. See CLEANING THE FILTER AND SEPARATOR page 9.
- The brushbar motor sensor has been activated. To reset clear any obstruction, wait 1 minute before switching the machine on. See REMOVING AND CLEANING THE BRUSHBAR page 10 and OPERATION page 7.

WHY WON'T THE MACHINE PICK UP?

- The dirt container may not be correctly fitted. See EMPTYING THE DIRT CONTAINER page 8.
- The dirt container may be blocked. Check the dirt container for blockages. See EMPTYING THE DIRT CONTAINER page 8.
- The filters may be clogged or need replacing. See CLEANING THE FILTER AND SEPARATOR page 9.
- There maybe a blockage. See CHECKING FOR BLOCKAGES page 12.
- The brushbar has not been activated. See OPERATION page 7.

WHY WON'T THE BRUSHBAR ON THE FLOORHEAD TURN?

- The brushbar has not been activated. Go to OPERATION page 7.
- The brushbar may be obstructed. See REMOVING AND CLEANING THE BRUSHBAR page 10.

For how-to videos and
warranty registration visit
www.vax.co.uk

info@vax.co.uk **vax.co.uk**

VAX Ltd, Artillery House, Heritage Way, Droitwich, WR9 8YB, UK.