

# BATTERY SAFETY GUIDE

The battery is intended for household use only and NOT for commercial or industrial use.

**PLEASE KEEP INSTRUCTIONS FOR FURTHER USE AND USE ONLY AS INSTRUCTED IN THIS GUIDE.**

Full instructions can be found at: [support.vax.co.uk](https://support.vax.co.uk)

## **BASIC SAFETY PRECAUTIONS**

- Charging of the battery pack will stop once the battery pack is fully recharged.
- Ambient Charging Temperature 5°C to 40°C.

## **DON'TS**

- Don't leave the charger plugged in when unattended.
- Don't use the battery if it has been dropped, damaged or left outdoors.  
If the battery is damaged contact us on: **08000 927737**
- Don't handle the battery with wet hands.
- Don't charge the battery if the charger power cord or plug is damaged.
- Don't charge the battery outdoors, or leave the charger connected to the mains when not in use.
- The battery is not intended to be used by persons with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given instructions concerning the safe use of the battery charger by a person legally responsible for their safety. They should be supervised whilst using the battery charger.

## DO'S

- Always remove the battery from the machine before carrying out any maintenance or if storing unused for a long period of time.
- Turn off all controls on the machine before disconnecting or connecting the battery.
- The battery is only to be used with VAX ONEPWR machines. Using other machines may invalidate the guarantee.
- Store the battery in a cool, dry area.
- Use only CE/UKCA approved 13amp extension cords, non-approved extension cords may overheat. Care should be taken to arrange the extension cord as it can be a trip hazard.
- Keep the battery away from children.
- Always stand the battery and charger on a stable, level surface.

## BATTERY SAFETY PRECAUTIONS

- Replace the battery with a VAX ONEPWR battery only. Use of another battery may present a risk of fire or explosion.
- Don't attempt to disassemble the battery, remove any component projecting from the battery terminals and do not dispose of in a fire. The battery and charger have no user serviceable parts. Fire or injury may result.
- Prior to disposal, protect exposed terminals with heavy insulating tape to prevent shorting. The battery is to be disposed of safely at your local battery recycling centre.
- When the battery pack is not in use, keep it away from other metal objects that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
- In case of battery leakages, avoid any contact with skin and contact us on: **08000 927737**

Battery Model	Type	Rated Voltage	Rated Capacity	Cell Number
BV15020	Li-Ion	18V	≤2.0Ah	5
BV15030	Li-Ion	18V	≤3.0Ah	5
BV25030	Li-Ion	18V	≤3.0Ah	5
BV25040	Li-Ion	18V	≤4.0Ah	5
BV25280	Li-Ion	18V	≤8.0Ah	5



Alternating current



Direct current



Class II Equipment



For indoor use only



Read operator's manual



Time-lag fuse 1.25A



CE/UKCA conformity



Do not dispose of electric tools together with household waste material. Electric tools and electronic equipment that have reached the end of their life must be collected separately and returned to an environmentally compatible recycling facility. Check with your local authority or retailer for recycling advice and collection point.