 


# GETTING STARTED

## ASSEMBLY AND OPERATION

**NOTE:** The charger can be stored on a flat stable surface or attached to the wall. Avoid storing the charger near or above a heating device.

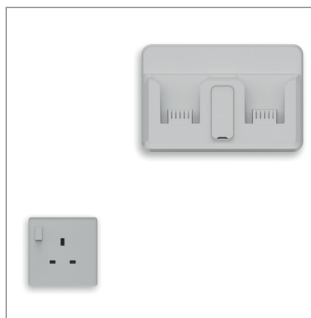

Choose a location for the charger to be stored near to a mains supply. This should not be directly above or below a mains socket. Ensure the charger is unplugged from the mains supply before fitting.




Excess cord length can be wrapped around the cord wrap on the back of the charger.



Unclip the charger indicator cover.



Holding the charger securely against the wall, use the screws to mark where the screws are to be located.

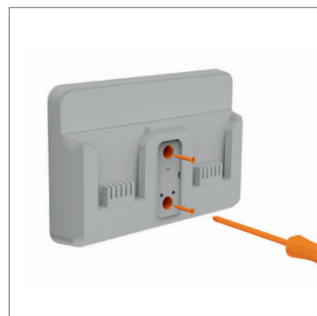

Secure the wall bracket to the wall using the screws provided, fit and tighten the top screw first, then the bottom screw.



Refit the charger indicator cover.

## GET IN TOUCH

@ [info@vax.co.uk](mailto:info@vax.co.uk) | [vax.co.uk](http://vax.co.uk)

**vax™**  
**ONE**  
**PWR**  
CORDLESS

## vax™ DUAL BAY CHARGER

### USER GUIDE



**EU Statement of Compliance:** Manufacturer/EU importer: VAX Limited, hereby on our own responsibility, declare that the **ONEPWR Dual Bay Charger** is manufactured in compliance with the following Directives:

**Safety:** 2014/35/EU Low Voltage Directive.

**EMC:** 2014/30/EU Electromagnetic Compatibility Directive.

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

© 2020 VAX Limited. All rights reserved. The VAX trade mark and VAX lozenge is the property of Techtronic Floor Care Technology Ltd and is registered in the EU and may be pending or registered in other countries.

VAX Ltd, Artillery House, Heritage Way, Droitwich, WR9 8YB, UK



For indoor use only



Alternating current



Direct current



Class II Equipment



Read operator's manual



T3.15A

Time-lag fuse 315A



CE conformity

Compatible with VAX ONEPWR batteries only.

BV05200

# SAFETY GUIDE

This machine is intended for household use only and NOT for commercial or industrial use.

PLEASE KEEP INSTRUCTIONS FOR FURTHER USE AND USE ONLY AS INSTRUCTED IN THIS GUIDE.

## DON'TS

- Don't leave the charger plugged in when unattended.
- Don't use the charger if it has been dropped, damaged or left outdoors.
- If the battery is damaged contact us on: 08000 927737
- Don't handle the charger with wet hands.
- Don't unplug the charger by pulling on the power cord.
- The power cord cannot be replaced. If the cord is damaged the charger should be scrapped.
- Don't charge the battery outdoors, or leave the charger connected to the mains when not in use.
- Don't use this charger to charge non-rechargeable batteries.
- This charger is not intended to be used or cleaned by persons with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given instructions concerning the safe use of the charger by a person legally responsible for their safety. They should be supervised whilst using the charger. Children shall not use, clean or play with this charger, which, when not in use should be secured out of their reach.

## DO'S

- This charger should only be used with VAX ONEPWR battery models:

MODEL	TYPE	RATED VOLTAGE	RATED CAPACITY	CELL NUMBER
BV15020	Li-Ion	18V	2.0Ah	5
BV15030	Li-Ion	18V	3.0Ah	5
BV15040	Li-Ion	18V	4.0Ah	5

- Always protect the charger from heated surfaces or near open flames.
- Store the charger in a cool, dry area.
- Use only CE approved 13amp extension cords, non-approved extension cords may overheat. Care should be taken to arrange the extension cord as it can be a trip hazard.
- Always attach the charger to a wall or stand the charger on a stable, level surface, uncovered and away from any heat source.

## BATTERY SAFETY PRECAUTIONS

- Input: 220-240V ~50Hz/60Hz. Ambient Charging Temperature 5°C to 40°C.
- Batteries will charge consecutively. Charging of the battery packs will stop once both battery packs are fully recharged.

# GETTING STARTED


## CHARGING THE BATTERY

PLEASE READ THE SAFETY GUIDE BEFORE USE.


**IMPORTANT:** Always ensure the batteries are secured into place. Hold the battery pack firmly to ensure it does not drop. Dropping can cause damage or result in personal injury. If the battery is damaged contact us on 08000 927737.

If the battery packs are too hot or too cold the charger will illuminate red. Once the battery pack reaches ambient temperature the battery will commence charging.

**NOTE:** Batteries will charge consecutively and the battery fitted first will charge first. It is normal for the battery pack to become slightly warm to the touch while charging.

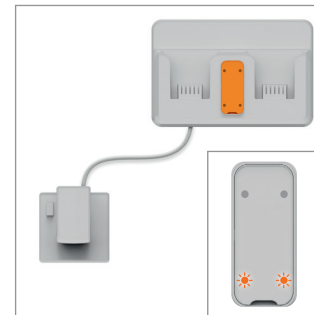

Plug the charger into the mains. The lights on the charger will flash red then white to indicate the charger is ready for charging.

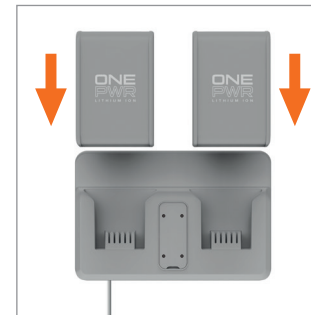

Slide the batteries down on to the charger.



The charger light will flash white to show which battery is charging and the battery indicator level lights will illuminate in turn as the battery charges.



When the first battery is fully charged the charger light will stop flashing and the battery indicator lights will go out.



The second battery charger light will flash and the second battery will start charging.




Once both batteries are fully charged the battery pack lights will stay illuminated and charging will stop.



To check the battery charge level press the battery symbol.

# GETTING STARTED

## CHARGING LIGHT INDICATORS

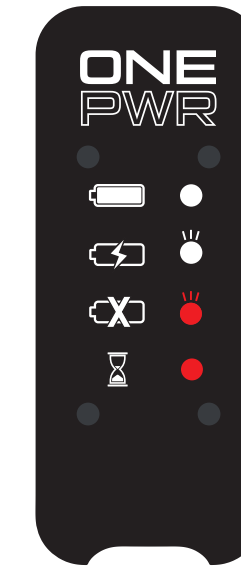

- Fully charged
- Charging
- Charge/Battery fault
- Battery pack too hot or too cold