



## VAX ONEPWR Charger



Slide the battery on to the charger.



The battery lights will flash white to indicate the battery is charging. The battery lights will illuminate in turn until all four lights are illuminated and the battery is charged. When fully charged the lights will go out.




When fully charged, press and hold the side buttons and slide the charger off the battery to remove.



### Charging light indicators

**ERROR**   
Charge/battery fault.

**CHARGING DELAY**   
Battery pack is too hot or too cold.



To check the battery charge level press the battery symbol.

## VAX ONEPWR Charger



Slide the battery on to the charger.



The battery lights will flash white to indicate the battery is charging. The battery lights will illuminate in turn until all four lights are illuminated and the battery is charged. When fully charged the lights will go out.



When fully charged, press and hold the side buttons and slide the charger off the battery to remove.



To check the battery charge level press the battery symbol.



### Charging light indicators

**ERROR** 

Charge/battery fault.

**CHARGING DELAY** 

Battery pack is too hot or too cold.