



# VAX SmartWash XL

Advanced

Carpet Washer



# Safety information

This machine is intended for household use only, not for commercial or industrial use.  
**Please keep instructions for future use and only as instructed in this guide.**

## Basic Safety Precautions

- Only use the machine indoors and keep the area you're cleaning well lit.
- Keep fingers, hair and loose clothing away from moving parts and openings whilst using the machine.
- Before using the machine test your carpets/rugs/upholstery for colourfastness and pile distortion.
- This appliance can be used by children from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Only VAX recommended tools and solution should be used with this machine. Using other solutions may invalidate the guarantee.

## Don'ts

- Don't leave the machine plugged in when unattended.
- Don't use the machine if it has been dropped, damaged or left outdoors.
- Don't run over the power cord or use the machine if the power cord or plug is damaged. If the power cord is damaged, it must be replaced by a qualified person in order to avoid a hazard.
- Don't use the machine to pick up any flammable or combustible materials (lighter fluid, petrol, kerosene etc.) or use the machine in an area with explosive vapours or liquid.
- Don't handle the plug or use the machine with wet hands.
- Don't pull or carry the machine by the power cord.
- Don't use the machine to pick up hot coals, cigarette butts, matches or smoking hot burning items or use in an area where there may be harmful fluids (chlorine, bleach and ammonia drain cleaner).
- Don't use the power cord as a handle, pull the power cord around corners or sharp edges, or close a door over the power cord.
- Don't unplug the machine by pulling on the power cord.
- Don't carry the machine while it's switched on.
- Don't attempt to remove blockages with sharp objects as this may cause damage to the machine. Remove blockages only as instructed in the user guide.
- Don't attempt to disassemble or repair the floorhead belt. Only carry out maintenance as instructed in this guide.

- Don't use the machine with incorrect voltage as this may result in damage or injury to the user. The correct voltage is listed on the ratings label.
- Don't over saturate your flooring. Always finish on a dry stroke.
- Don't use on a surface that is damaged, uneven or incorrectly fitted.

## **Do's**

- Check with the manufacturer of your flooring prior to using the machine.
- The clean water tank should be filled with warm water (max 40°C) only. Filling the clean water tank with hot or boiling water will damage the machine and invalidate the guarantee.
- Always vacuum your flooring thoroughly before using the machine.
- Test all carpets/rugs/upholstery before full usage. Run the machine over a small hidden area. If no damage or pile distortion occurs continue cleaning.
- Only replace the fuse in the plug with a British 13amp fuse.
- Always unplug the machine before carrying out any maintenance and before connecting or disconnecting the hose/accessories.
- Always check the machine, tools and accessories are free from damage, dirt/debris before using.
- Take extra care when cleaning on the stairs.
- Always protect the power cord from heated surfaces and open flames.
- Turn off all controls on the machine before disconnecting or connecting the power cord. After use always wrap the power cord around the cord clips provided.
- Always keep the power cord away from the brushes whilst using the machine.
- Use only CE/UKCA approved 13amp extension cords, non-approved extension cords may overheat. Care should be taken to arrange the extension cord as it can be a trip hazard.
- Always use the machine with all water tanks, filters and float assembly in place.
- Keep all openings clear and free from debris as this may affect the airflow/suction/water pick up.
- Always use the machine in an upright position. To prevent motor damage from dirty water, never hold the machine upside down or on its side.
- Store the machine in a cool, dry area. Before storing the machine please ensure all water tanks are empty and filters are thoroughly clean and dry.

## Welcome to the Vax family!

You're now the proud owner of a VAX SmartWash XL Advanced. Here you'll find everything you need to know about your machine and, most importantly, instructions on how to get started so that you can get cleaning!

### Contents

<a href="#">Safety information</a>	2 - 3
<a href="#">Introduction</a>	4
<a href="#">Machine overview</a>	5
<a href="#">Quick start</a>	6
<a href="#">Getting started</a>	7
<a href="#">Using your machine</a>	8 - 12
<a href="#">Cleaning and maintenance</a>	13 - 16
<a href="#">Troubleshooting</a>	17
<a href="#">Guarantee and technical</a>	18

### Register your product to activate your free 6 year guarantee



#### **Bought your product directly from [vax.co.uk](http://vax.co.uk)?**

Relax - your guarantee will be automatically emailed to you. Contact us if you haven't received this and we'll be happy to help.

**Bought elsewhere?** Registering is quick and easy. Scan this QR code or visit [vax.co.uk/registration](http://vax.co.uk/registration)

Please see the back cover of this User Guide for more detail.

# Machine overview



- 1 Handle
- 2 MODE button
- 3 ON/OFF button
- 4 Function display panel
- 5 SELF-RINSE button
- 6 Clean water/solution tank
- 7 Dirty water tank handle
- 8 Dirty water tank lid clip (hidden)
- 9 Float assembly
- 10 Filter (hidden)
- 11 Dirty water tank
- 12 Hose connection port cover
- 13 Nozzle release clip
- 14 Nozzle
- 15 Brushbars
- 16 Cord hook
- 17 Quick release cord hooks
- 18 Carry handle
- 19 Handle release/recline pedal
- 20 Self rinse tray
- 21 2.5m Hose
- 22 2-in-1 Antimicrobial Tool
- 23 SpinScrub Tool
- 24 Accessory Bag
- 25 500ml Platinum Antibacterial solution
- 26 250ml Pre-treatment solution

Weight 8.65kg. Cord length 9m  
 Dirty water tank capacity 2.5L  
 Clean water/solution tank capacity 3.7L  
 Subject to technical change without notice.  
 Images are illustrative only.



SCAN HERE TO GET TO  
 KNOW YOUR MACHINE  
 visit [www.vax.co.uk](http://www.vax.co.uk)  
 for help and support with  
 setting up your machine




# Quick start

# 1

## Assembly

Slide the handle into the machine until it clicks into place.

Tilt and line up the front of the clean water/solution tank with the machine. Push back until it clicks into place.

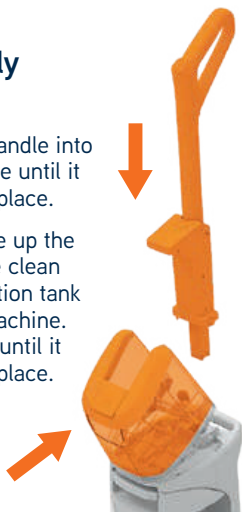

# 2

## Filling the clean water/solution tank

Fill the clean water/solution tank with warm water (max 40°C) and VAX carpet cleaning solution to the levels on the tank.



# 3

## Operation

Plug into the mains and press the ON/OFF button on the handle.



The machine will start in AUTO mode. To change the mode, press the MODE button.

**MODE**



# 4

## Wash

In AUTO, slowly push the machine forwards. The water and solution will automatically dispense.



To pick up the water and solution, slowly pull the machine backwards.



**SCAN HERE TO WATCH OUR HOW-TO VIDEOS**

or visit [support.vax.co.uk](https://support.vax.co.uk) for help and support with using your machine

**PLEASE READ THE SAFETY PRECAUTIONS ON PAGES 2 & 3 BEFORE USE.**

**IMPORTANT:** Carpets should be dry vacuumed thoroughly before washing.

- Test for colourfastness - Wet a white absorbent cloth with the solution. In a small hidden area of your carpet/rugs/upholstery, gently rub with the dampened cloth. Wait ten minutes and check for colour removal or bleed with a white paper towel or cloth. Check all carpets/rugs/upholstery material before first use and if your carpet has more than one colour, check all colours.
- Test all flooring/carpets/rugs before first usage. Run the machine over a small hidden area. If no damage or pile distortion occurs continue cleaning.
- When using the machine, basic safety precautions should always be observed. Do not over saturate your carpets and continue using dry strokes until little water is visibly passing through the nozzle. When using the hose and tools always finish on a dry stroke.
- When cleaning an entire room, move furniture out of the area to be cleaned. If the furniture cannot be moved, place aluminium foil or wax paper under the legs. This will prevent wood finishes from staining your carpet. Pin up furniture skirts and curtains.
- Only use VAX carpet solution. Using other solutions may cause excess foaming and will invalidate the guarantee.
- For heavily soiled areas, it may be necessary to repeat the cleaning process. Make criss-crossing strokes across the original pattern and overlap with each pass.
- The clean water tank should only be filled with warm water (max 40°C). Filling the clean water tank with hot/boiling water will damage your machine and invalidate the guarantee.
- Do not leave solution stored in the tanks between uses.
- Empty and rinse out clean and dirty water tanks and leave to air dry before storage.
- This is a powerful machine, before plugging in make sure all controls are turned off and hold the machine firmly when starting and during use.

## Assembly



Stand the base of the machine on the floor in the upright position.



Slide the handle into the main body until it clicks into place.



To fit the clean water/solution tank onto the machine, tilt and line the front of the tank onto the machine. Push back until it clicks into place.



Use the carry handle to lift the machine. Only carry when both tanks are removed or empty.

# Using your machine

## Filling the clean water/solution tank

**IMPORTANT:** Only use VAX carpet washing solution. Using other solutions may cause excess foaming and will invalidate the guarantee.



Pull and lift to remove the clean water/solution tank.



Lift to open the clean water/solution tank fill cap.



Fill the tank with warm water (max 40°C) and solution to the levels indicated by the lines on the tank.



Close the clean water/solution tank fill cap.



To fit the clean water/solution tank onto the machine, tilt and line the front of the tank onto the machine. Push back until it clicks into place.



During use when the dirty water tank is full and needs emptying, the CHECK TANKS icon will illuminate.

## Operation

**IMPORTANT:** Carpets should be dry vacuumed thoroughly before washing. For heavily soiled areas, it may be necessary to repeat the cleaning process. Make criss-crossing strokes across the original pattern and overlap with each pass. Do not over saturate the carpet.

**NOTE:** The handle controls are deactivated when the machine is standing in the self rinse tray.



Remove the machine from the self rinse tray.



Turn the quick release cord hooks to release the power cord.



Clip the cord into the cord hook so that the cord does not get pulled, caught or tangled in the machine during use.



Plug the machine into the mains. The display panel will flash and the machine will enter standby mode.

## Operation

### Function Display Panel



#### SPOT

Dispenses water and solution on the forward and backward stroke for tougher spot cleaning.

#### WASH

Illuminates when dispensing water and solution.

#### AUTO

Dispenses water and solution on the forward stroke and recovers the water and solution on the backwards stroke.

#### DRY

Illuminates when recovering water and solution.

#### DRY ONLY

For a dryer finish. No water or solution is dispensed.

#### CHECK TANKS

Illuminates and flashes when the clean water/solution tank is empty and needs refilling or the dirty water tank is full and needs emptying.

#### SELF-RINSE

Will only activate when stood in the rinse/storage tray. Illuminates and flashes when activated. It will use all contents of the water/solution tank to rinse and remove any remaining dirt and debris from the brushbars and nozzle.

**CAUTION:** The brushbar constantly rotates when switched on and the machine is reclined. Never use on one spot for an extended period of time as the brushbar may damage the floor surface.

**NOTE:** The machine and brushbar only function when the machine is reclined. When upright the machine will enter standby mode. Switch off and unplug the machine from the mains when not in use.



Press the ON/OFF button on the handle to switch the machine on. The function display panel will illuminate.



Press the MODE button on the handle to move through modes AUTO, SPOT and DRY ONLY.



Press the handle release pedal and pull the handle backwards to recline the machine.




**SCAN HERE TO GET TO KNOW YOUR MACHINE**  
visit [www.vax.co.uk](http://www.vax.co.uk)  
for help and support with setting up your machine


# Using your machine

**IMPORTANT:** The dirty water tank is fitted with a float. When the dirty water tank is full, the float will shut off the suction on the machine. When this happens the motor noise on the machine will increase and the CHECK TANKS light will illuminate. Once the light is illuminated or the float is activated, check if the dirty water tank is full and empty if necessary.


Always switch off and unplug the machine before carrying. Lift by using the carry handle whilst the tanks are removed or empty.

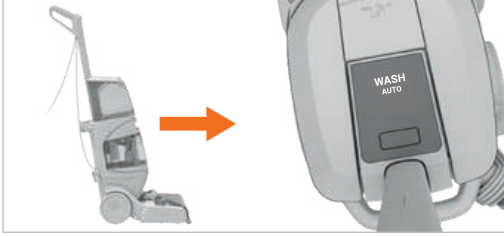


Select AUTO mode to wash carpets. Slowly push the machine forward. The function display panel will illuminate WASH, and water and solution will automatically be dispensed.

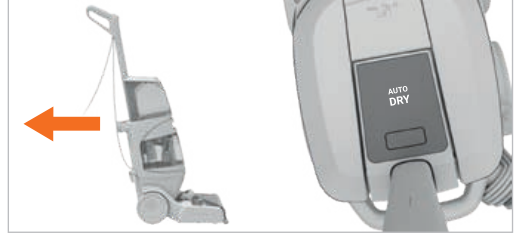

Slowly pull the machine backwards. The function display panel will illuminate DRY, and water and solution will be recovered.

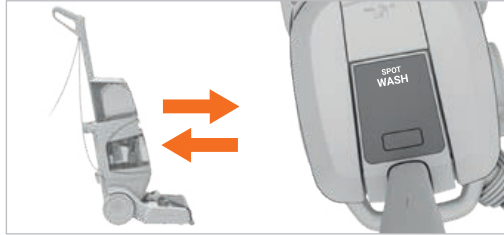

For particularly dirty areas, press the MODE button on the handle until SPOT illuminates to increase the amount of water and solution released. The function display panel will illuminate WASH.

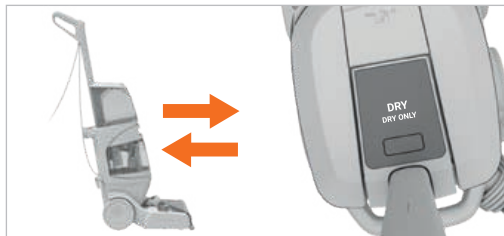

For a dryer finish, press the MODE button on the handle until DRY ONLY illuminates. Water and solution will stop being dispensed. Continue using dry strokes until little water is visibly passing through the nozzle. The function display panel will illuminate DRY.

## Rinsing the carpet

**IMPORTANT:** The dirty water tank is fitted with a float. When the dirty water tank is full, the float will shut off the suction on the machine. When this happens the motor noise on the machine will increase and the CHECK TANKS light will illuminate. Once the light is illuminated or the float is activated, check if the dirty water tank is full and empty if necessary. **OPTIONAL STEP** - to extract any remaining solution from your carpet, rinse your carpets with water only.

**NOTE:** The machine and brushbar only function when the machine is reclined. When upright the machine will enter standby mode. Switch off and unplug the machine from the mains when not in use.



To rinse, empty the clean water/solution tank and refill with warm water (max 40°C). Refit the tank.




Press the handle release pedal and pull the handle backwards to recline the machine.




Press the ON/OFF button on the handle to switch the machine on. The function display panel will illuminate.



In AUTO mode. Slowly push the machine forward. The function display panel will illuminate WASH, and water will automatically be dispensed.

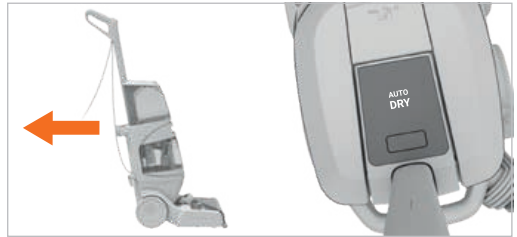

Slowly pull the machine backwards. The function display panel will illuminate DRY, and water will be recovered.

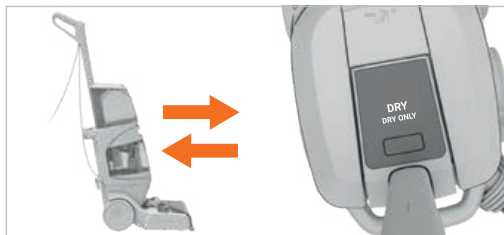

For a dryer finish, press the MODE button on the handle until DRY ONLY illuminates. Water and solution will stop being dispensed. Continue using dry strokes until little water is visibly passing through the nozzle. The function display panel will illuminate DRY.

# Using your machine

## Using the hose and tools

**IMPORTANT:** The machine should be in the upright position when using the hose and tools; this will de-activate the brushes. To avoid saturating the carpet, do not use more than 4 wet strokes over any one area. Always end with dry strokes (trigger released).



SCAN HERE TO WATCH  
OUR HOW-TO VIDEOS  
visit [www.vax.co.uk](http://www.vax.co.uk)  
for help and support with  
setting up your machine

### 2-in-1 Antimicrobial Tool

Suitable for use on upholstery and carpeted stairs. Perfect for reaching into crevices.

### SpinScrub Hand Tool

Suitable for targeting stains and stubborn marks on rugs and carpet.



Open the hose connection port cover.

Push the hose end and hose solution connector into the hose connection port.

Select the SpinScrub or 2-in-1 Antimicrobial tool. Slide the tool over the tab at the end of the hose until it clicks into place.



Press the ON/OFF button on the handle to switch the machine on. The function display panel will illuminate.

Press the trigger on the forward stroke to release water/solution. Release the trigger on the backward stroke to pick up water/solution. For a dryer finish continue using dry strokes (trigger released) until little water is visibly passing through the tool.

To remove the hose press the hose release clip on the end of the hose and pull to remove.

Always close the hose connection port cover after using the hose. The machine may lose suction if it is not closed properly.

## Emptying and cleaning the dirty water tank

**CAUTION:** Always switch off and unplug the machine before performing any maintenance/troubleshooting checks.

The dirty water tank is fitted with a float assembly. When the dirty water tank is full, the float will shut off the suction on the machine. When this happens the motor noise on the machine will increase and the CHECK TANKS light will illuminate. Once the light is illuminated or the float is activated, check if the dirty water tank is full and empty if necessary.



When the tank is full and needs emptying the CHECK TANKS icon will illuminate.




Pull the dirty water tank handle up, then tilt and pull to remove the tank from the machine.



Lift and unhook the dirty water tank clip to release the lid.



Lift the lid to remove.

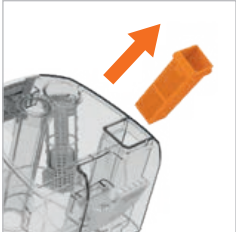


Slide the filter out of the dirty water tank.



Twist the float assembly clockwise to remove from the dirty water tank.



Empty the dirty water tank over a drain. Rinse the dirty water tank, lid, filter and float assembly under warm water (max 40°C) to remove dirt/debris.

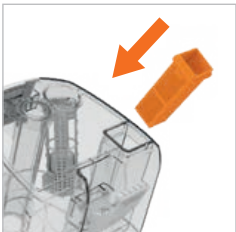

Slide the filter back into the dirty water tank.



Ensure you have both parts of the float assembly, the float and float frame before reassembling.



Twist the float assembly anti-clockwise to reattach to the dirty water tank.

# Cleaning and maintenance



To replace the lid, hook the tab on the front of the lid into the front of the dirty water tank.



Push the clip up and hook the latch onto the tank lid. Push the top of the latch inwards until it clicks into place.



To replace the dirty water tank, tilt and line the front of the tank up onto the machine. Push back until it clicks into place.

## Using the self rinse mode

**IMPORTANT:** The motor is equipped with a thermal cut-out. If for any reason the machine should overheat, the thermostat will automatically turn the machine off. Switch off and unplug the machine. Check the machine for blockages and clean the dirty water tank filter. The self rinse mode will only activate when the machine is standing in the self rinse tray. Use water only during the self rinse cycle.



Remove the dirty water tank and empty into a drain. Refit the tank.



Remove the clean water/solution tank. Pull to open the tank cap and refill with warm water to the SELF RINSE line (max 40°C). Close the tank cap and refit the tank.



Stand the machine in the self rinse tray. The SELF RINSE button will illuminate.



Press the SELF RINSE button to activate. The brushroll will spin and water will automatically be released. To stop the self rinse mid-cycle press the SELF RINSE button.

**IMPORTANT:** Switch off and unplug the machine once the self rinse cycle has been completed.




Empty the dirty water tank over a drain. Rinse the dirty water tank, lid, filter and float assembly under warm water (max 40°C) to remove dirt/debris. See page 13 for full instructions.



Rinse the self rinse tray under warm water (max 40°C) to remove dirt and debris.

## Removing and cleaning the nozzle

**IMPORTANT:** Carpets should be dry vacuumed thoroughly before washing. This will prevent excessive build up of dirt/debris in the nozzle. If the nozzle is fitted incorrectly, this will cause poor dirty water pick up.

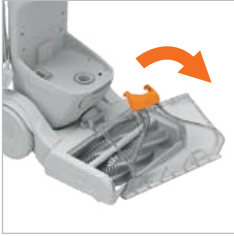

Lift the nozzle release clip and pull the nozzle forward to remove.



Rinse the nozzle under warm water (max 40°C) to remove dirt/debris.



Hook the tabs on the base of the nozzle under the tabs on the base of the machine.



Lower the nozzle backwards until the nozzle release clip clicks into place.

## Removing the brushbars and advanced cleaning


**WARNING:** Always switch off and unplug the machine before performing any checks or maintenance.



Lift the nozzle release clip and pull the nozzle forward to remove.



Pull the tabs up on the side of both brushbars to remove them.

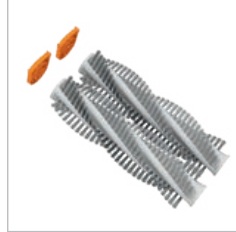

Pull to remove the brushbars end caps.



Rinse the brushbars under warm water (max 40°C) to remove dirt/debris.



Wipe the water distribution bar to remove dirt/debris.



Replace the brushbar end caps.



To replace the brushbars, align the right side of the first brushbar onto the circular gearing. Push the left tab downwards until it clicks into place. Repeat the same process with the other brushbar.



# Cleaning and maintenance



Hook the tabs on the base of the nozzle under the tabs on the base of the machine.



Lower the nozzle backwards until the nozzle release clip clicks into place.



**SCAN HERE TO GET TO KNOW YOUR MACHINE**  
visit [www.vax.co.uk](http://www.vax.co.uk)  
for help and support with setting up your machine

## Storing the machine

**IMPORTANT: Empty and rinse out clean water/solution and dirty water tanks and leave to air dry before storage.**



To store, loosely wrap the power cord around the cord hooks. Stand the machine in the rinse/ storage tray between uses to catch excess water.

## Removing the handle

**WARNING: Always switch off and unplug the machine before performing any checks or maintenance.**



Pull and lift to remove the clean water/solution tank.



Using a thin blunt object, press the button inwards.



Pull firmly on the handle to remove.

**WARNING: Always switch off and unplug the machine before performing any checks or maintenance.**

## There is an accessory missing

- Check the contents on the box to make sure the part is definitely included with your machine.
- 

## Why won't the machine turn on?

- The plug may not be fully pushed into the electrical socket.
  - The fuse in the plug may need replacing. Always replace with a British 13amp fuse.
  - The motor thermostat may have tripped. If this has happened, unplug the machine. Check the machine for blockages and clean the dirty water tank filter.
- 

## Why won't the machine pick up?

- The float in the dirty water tank may have been activated. Empty the dirty water tank and wait for the float to settle before restarting your machine. **See Emptying and cleaning the dirty water tank page 13.**
  - Check the brushbars for blockages and clear. **See Removing the brushbars and advanced cleaning page 15.**
  - The dirty water tank and/or lid may not be fitted correctly. **See Emptying and cleaning the dirty water tank page 13.**
  - Check the nozzle for blockages and clear. **See Removing and cleaning the nozzle page 15.**
  - Check the nozzle is correctly fitted. **See Removing and cleaning the nozzle page 15.**
  - Check the filter in the dirty water tank for dirt/debris. Remove and clean. **See Emptying and cleaning the dirty water tank page 13.**
  - The hose connector port cover may be open, close and retry. **See Using the hose and tools page 12.**
- 

## Why won't the solution/clean water dispense?

- Make sure the solution and clean water tank is fitted securely. **See Filling the clean water/solution tank page 8**
  - Dry mode may be activated. Deactivate and retry . **See Operation page 10.**
  - Solution/water will only be delivered on the forward stroke. **See Operation page 10.**
  - The solution or clean water tank valve may be stuck. Hold the tank over the sink and press the valve underneath to release.
  - The solution or clean water tank is empty. Refill the tank. **See Filling the clean water/solution tank page 8.**
- 

## Why won't the solution/clean water dispense when using the hose?

- Make sure the solution and clean water tank is fitted securely. **See Filling the clean water/solution tank page 8.**
  - Dry mode may be activated. Deactivate and retry . **See Operation page 10.**
  - Trigger on the hose may not be fully pressed. **See Using the hose and tools page 12.**
  - The solution or clean water tank valve may be stuck. Hold the tank over the sink and press the valve underneath to release.
  - The solution or clean water tank is empty. Refill the tank. **See Filling the clean water/solution tank page 8.**
- 

## Why won't the brushbars spin ?

- The brushes will only spin when the machine is reclined.
- Check the brushbars are correctly fitted. **See Removing the brushbars and advanced cleaning page 15.**
- Check the brushbars for blockages and clear. **See Removing the brushbars and advanced cleaning page 15.**
- Check for damage to the brushbars.

# Guarantee and technical

## Guarantee

If a VAX machine is used in the way it is intended and it breaks down within the guarantee period, it's our responsibility to repair or replace it.

Here's what isn't covered:

- Functional parts, tools and accessories after 12 months that may suffer premature failure due to every day wear and tear.
- Consumables after 3 months such as belts, filters, brushbars, fuses etc.
- Accidental damage.
- Cosmetic damage that does not affect the functioning of the product.
- Damage as a result of use not in accordance with the user guide.
- Damage caused by not carrying out regular maintenance.
- Damage to the power cord.
- Blockages; please refer to the user guide.
- Poor product performance caused by:
  - Negligent use, misuse or careless operation of the machine.
  - Failure to clean or maintain the product in accordance with the user guide.
  - Use of the machine which is not in accordance with the user guide.
  - Use of a VAX product for anything other than normal domestic household purposes in the country in which it was purchased.
  - Use of parts, accessories and consumables, which are not genuine VAX components.
  - Faulty installation or repairs - unless carried out by a qualified electrician or engineer.

## Making a claim?

If you wish to make a claim under your standard 1 year guarantee or extended guarantee, please contact us on the details set out in our Vax Terms and Conditions.

## Technical

Statement of Compliance: Manufacturer/EU importer: Vax Limited, hereby on our own responsibility, declare that the **VAX SmartWash XL Advanced** is manufactured in compliance with the following Legislation:

Safety: 2014/35/EU Low Voltage Directives/Electrical Equipment (Safety) Regulations 2016. EMC: 2014/30/EU Electromagnetic Compatibility Directive/ Electromagnetic Compatibility Regulations 2016.



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

VAX is a trade mark of Techtronic Cordless GP.

© 2025 Techtronic Cordless GP. All rights reserved.

Vax Ltd, Artillery House, Heritage Way, Droitwich, WR9 8YB, UK.





# PROTECT YOUR PRODUCT FOR LONGER, REGISTER TO ACTIVATE YOUR **FREE 6 YEAR GUARANTEE\***

## **Bought your product direct from [vax.co.uk](http://vax.co.uk)?**

Sit back and relax - your free 6 year guarantee was automatically applied at the checkout.

Check your email for details of your guarantee\*.  
Please contact us if you haven't received this and we'll be happy to help.

## **Bought elsewhere?**

All VAX products have a 1 year standard guarantee.  
Register now to claim your additional 5 year guarantee (6 years in total).  
Registering is quick and easy, just follow the steps below:

### **1** What you'll need

Grab your machine and proof of purchase and keep them handy.

### **2** Register

To get started scan the QR code, or visit [vax.co.uk/registration](http://vax.co.uk/registration)



### **3** Congratulations!

You've now secured your total 6 year guarantee! (Keep an eye out for your confirmation email - you'll need to keep this safe).



Your guarantee is with Vax Limited. Please note that your statutory rights in relation to any VAX products will remain unaffected by these guarantees.

\*All VAX products bought in the UK come with a standard 1 year guarantee from the date of purchase. Most VAX products are eligible for an "Additional Guarantee" by registering with Vax. Registration within 3 months from date of purchase is required to claim the additional guarantee and is subject to our terms and conditions ([www.vax.co.uk/registration/guarantee-information](http://www.vax.co.uk/registration/guarantee-information)).

If you need help registering, please visit [www.vax.co.uk/contact](http://www.vax.co.uk/contact).